



W10 TWO Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	32939	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	32942	Panel, Instrument-Admiral	36843
Belt, STD Alternator	13585	Preheat & Start Switch	24639
Circuit Breaker	24683	Pump, Fresh Water	33197
Dipstick	33170	Pump, Mounting Gasket	33198
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	32617
Filter, Electric Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	33162	Pump, Impeller Kit	32620
Gasket, Oil Pan	33169	Pump, Repair Kit	N/A
Gasket Set, Upper	33075	Pump, Seal	N/A
Gasket Set, Complete	33076	Pump, Fuel Lift	39275
Glow-plug	33204	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	39275
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	32501	Solenoid, Preheat	24639
Heat Exchanger End Cap	33297	Spare Parts Kit A	33077
Heat Exchanger Gasket	33298	Spare Parts Kit B	33078
Injector	33157	Starter Motor	32940
Injection Pump	33181	Starter Solenoid	30245
Injection Hardware Kit	33079	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	20950	Thermostat Mounting Gasket(2)	32586
Isolators, Front	32013	Valve Cover Gasket	33164
Isolators, Rear	32013	Voltmeter	23090
Manual, Operator	33105	Water Temperature Meter	37601
Manual, Parts List	33404	Water Temperature Sender	23571
Manual, Technical	33403	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 90	23329
Oil Pressure Meter	35110	Zinc	11885
Oil Pressure Sender	24132		

**W12B TWO Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	32939	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	32942	Panel, Instrument-Admiral	36843
Belt, STD Alternator	13585	Preheat & Start Switch	24639
Circuit Breaker	24683	Pump, Fresh Water	33197
Dipstick	33170	Pump, Mounting Gasket	33198
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	32617
Filter, Electric Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	33162	Pump, Impeller Kit	32620
Gasket, Oil Pan	33169	Pump, Repair Kit	N/A
Gasket Set, Upper	33075	Pump, Seal	N/A
Gasket Set, Complete	33076	Pump, Fuel Lift	39275
Glow-plug	33204	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	39275
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	32501	Solenoid, Preheat	24639
Heat Exchanger End Cap	33297	Spare Parts Kit A	33077
Heat Exchanger Gasket	33298	Spare Parts Kit B	33078
Injector	33157	Starter Motor	32940
Injection Pump	33181	Starter Solenoid	30245
Injection Hardware Kit	33079	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	20950	Thermostat Mounting Gasket(2)	32586
Isolators, Front	32013	Valve Cover Gasket	33164
Isolators, Rear	32013	Voltmeter	23090
Manual, Operator	33105	Water Temperature Meter	37601
Manual, Parts List	33404	Water Temperature Sender	23571
Manual, Technical	33403	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 90	23329
Oil Pressure Meter	35110	Zinc	11885
Oil Pressure Sender	24132		

12C TWO Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	38527	Preheat & Start Switch	33764
Circuit Breaker	36563	Pump, Fresh Water	37015
Dipstick	37072	Pump, Mounting Gasket	36957
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	36977	Pump, Impeller Kit	34440
Gasket, Oil Pan	37032	Pump, Repair Kit	34466
Gasket Set, Upper	36998	Pump, Seal	33043
Gasket Set, Complete	36999	Pump, Fuel Lift	39275
Glow-plug	36961	Remote Lube Oil Filter	40078
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37191
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	37100
Heat Exchanger	37587	Solenoid, Preheat	24639
Heat Exchanger End Cap	33297	Spare Parts Kit A	37002
Heat Exchanger Gasket	33298	Spare Parts Kit B	37003
Injector	37019	Starter Motor	34552
Injection Pump	37102	Starter Solenoid	36218
Injection Hardware Kit	37121	Tank, Coolant Recovery	24977
Injector Nozzle	36935	Thermostat	37043
Injector Return Line	34857	Thermostat Mounting Gasket	36956
Isolators, Front	40621	Valve Cover Gasket	37039
Isolators, Rear	36339	Voltmeter	37605
Manual, Operator	39717	Water Temperature Meter	37601
Manual, Parts List	39721	Water Temperature Sender	35106
Manual, Technical	37600	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

W13 Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30592	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	37431
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	30339	Pump, Impeller Kit	34440
Gasket, Oil Pan	30350	Pump, Repair Kit	34466
Gasket Set, Upper	30722	Pump, Seal	33043
Gasket Set, Complete	30723	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	24774	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	33077
Heat Exchanger Gasket	31291	Spare Parts Kit B	33078
Injector	30538	Starter Motor	32940
Injection Pump	31283	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30076	Thermostat Mounting Gasket	24323(2)
Isolators, Front	34405	Valve Cover Gasket	33164
Isolators, Rear	34405	Voltmeter	23090
Manual, Operator	N/A	Water Temperature Meter	37601
Manual, Parts List	32139	Water Temperature Sender	23571
Manual, Technical	43444	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	36259
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	23329
Oil Pressure Sender	24132	Zinc	11885

**W13A Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30592	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	37431
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	33786	Pump, Impeller Kit	34440
Gasket, Oil Pan	30498	Pump, Repair Kit	34466
Gasket Set, Upper	33775	Pump, Seal	33043
Gasket Set, Complete	33776	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	24774	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	24933
Heat Exchanger Gasket	31291	Spare Parts Kit B	24934
Injector	30538	Starter Motor	30593
Injection Pump	31283	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	34857	Thermostat Mounting Gasket	24323(2)
Isolators, Front	34405	Valve Cover Gasket	30342
Isolators, Rear	34405	Voltmeter	23090
Manual, Operator	36195	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

**W18 Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30592	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	33786	Pump, Impeller Kit	34440
Gasket, Oil Pan	30498	Pump, Repair Kit	34466
Gasket Set, Upper	33775	Pump, Seal	33043
Gasket Set, Complete	33776	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	24774	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	24935
Heat Exchanger Gasket	31291	Spare Parts Kit B	33777
Injector	30538	Starter Motor	30593
Injection Pump	33800	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30569	Thermostat Mounting Gasket	24323(2)
Isolators, Front	34405	Valve Cover Gasket	30515
Isolators, Rear	34405	Voltmeter	35111
Manual, Operator	36195	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

20B Two Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	37349	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	37015
Dipstick	37072	Pump, Mounting Gasket	36957
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	N/A	Pump, Mounting Gasket	30326
Gasket, Head	36977	Pump, Impeller Kit	34440
Gasket, Oil Pan	37032	Pump, Repair Kit	34466
Gasket Set, Upper	36998	Pump, Seal	33043
Gasket Set, Complete	36999	Pump, Fuel Lift	38278
Glow-plug	36961	Remote Lube Oil Filter	40078
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37191
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	37100
Heat Exchanger	37587	Solenoid, Preheat	24639
Heat Exchanger End Cap	33297	Spare Parts Kit A	37002
Heat Exchanger Gasket	33298	Spare Parts Kit B	37003
Injector	37019	Starter Motor	34552
Injection Pump	37102	Starter Solenoid	36218
Injection Hardware Kit	37121	Tank, Coolant Recovery	24977
Injector Nozzle	36935	Thermostat	37043
Injector Return Line	37098	Thermostat Mounting Gasket	36956
Isolators, Front	40621	Valve Cover Gasket	37039
Isolators, Rear	40621	Voltmeter	37605
Manual, Operator	36906	Water Temperature Meter	37601
Manual, Parts List	37115	Water Temperature Sender	35109
Manual, Technical	37600	Water Temperature Switch	37493
Oil Pressure Switch	Note	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

Note: Oil Pressure Switch For Units Produced Up to 12/88 Use 34761 ; From 12/88 Use 37323

**W21 Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30592	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	33786	Pump, Impeller Kit	34440
Gasket, Oil Pan	30498	Pump, Repair Kit	34466
Gasket Set, Upper	33775	Pump, Seal	33043
Gasket Set, Complete	33776	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	24774	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	24935
Heat Exchanger Gasket	31291	Spare Parts Kit B	24936
Injector	30538	Starter Motor	30593
Injection Pump	30549	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30082	Thermostat Mounting Gasket	24323(2)
Isolators, Front	34405	Valve Cover Gasket	30515
Isolators, Rear	34405	Voltmeter	35111
Manual, Operator	N/A	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	36259
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	23329
Oil Pressure Sender	24132	Zinc	11885

**W21A Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30475	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	30509	Pump, Impeller Kit	34440
Gasket, Oil Pan	30498	Pump, Repair Kit	34466
Gasket Set, Upper	30724	Pump, Seal	33043
Gasket Set, Complete	30725	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	24935
Heat Exchanger Gasket	22851	Spare Parts Kit B	24936
Injector	30538	Starter Motor	30593
Injection Pump	30549	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30569	Thermostat Mounting Gasket	24323(2)
Isolators, Front	34405	Valve Cover Gasket	30515
Isolators, Rear	34405	Voltmeter	35111
Manual, Operator	36195	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

**W27 Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30592	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	30507	Pump, Impeller Kit	34440
Gasket, Oil Pan	30499	Pump, Repair Kit	34466
Gasket Set, Upper	30726	Pump, Seal	33043
Gasket Set, Complete	30727	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	24774	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	24935
Heat Exchanger Gasket	31291	Spare Parts Kit B	24936
Injector	30538	Starter Motor	30593
Injection Pump	30550	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30570	Thermostat Mounting Gasket	24323(2)
Isolators, Front	32013	Valve Cover Gasket	30516
Isolators, Rear	32013	Voltmeter	35111
Manual, Operator	36195	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43440	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

W27A Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30592	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	30507	Pump, Impeller Kit	34440
Gasket, Oil Pan	30499	Pump, Repair Kit	34466
Gasket Set, Upper	30726	Pump, Seal	33043
Gasket Set, Complete	30727	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	24935
Heat Exchanger Gasket	22851	Spare Parts Kit B	24936
Injector	30538	Starter Motor	30593
Injection Pump	30550	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30082	Thermostat Mounting Gasket	24323(2)
Isolators, Front	32013	Valve Cover Gasket	30516
Isolators, Rear	32013	Voltmeter	35111
Manual, Operator	N/A	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43440	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	36259
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	23329
Oil Pressure Sender	24132	Zinc	11885

W30B- Three Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36842
Belt, STD Alternator	38527	Preheat & Start Switch	33764
Circuit Breaker 10 Amp 12 VDC	36563	Pump, Fresh Water	37015
Dipstick	37072	Pump, Rebuild Kit (33636 Pump)	34466
Filter, Lube Oil	36918	Pump, Rebuild Kit (48080 Pump)	49000
Filter, Fuel Oil	30200	Pump, Sea Water (replaces 33636)	48080
Fuel Hardware Kit	37121	Pump, Mounting Gasket	N/A
Gasket, Head	36969	Pump, Impeller Kit (48080 & 33636)	48500
Gasket, Oil Pan	36988		
Gasket Set, Upper	37116		
Gasket Set, Complete	37117	Pump, Fuel Lift	39272
Glow-plug	36961	Remote Lube Oil Filter	40078
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	36342
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	37100
Heat Exchanger	37564	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	37118
Heat Exchanger Gasket	22851	Spare Parts Kit B	37119
Hour-meter	36192		
Injector	37091	Starter Motor	34552
Injection Pump	37103	Starter Solenoid	36218
Injection Hardware Kit	N/A	Tank, Coolant Recovery	24677
Injector Nozzle	36935	Thermostat	37043
Injector Return Line	37099	Thermostat Mounting Gasket	36956
Isolators, Front	40621	Valve Cover Gasket	37007
Isolators, Rear	303062	Voltmeter	37605
Manual, Operator	36906	Water Temperature Meter	37601
Manual, Parts List	37115	Water Temperature Sender	35109
Manual, Technical	37600	Water Temperature Switch	37493
Oil Pressure Switch (1 Terminal)	34761	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24131	Zinc	11885

**W33 Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30475	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30473
Dipstick	30464	Pump, Mounting Gasket	30474
Filter, Lube Oil	35828	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket (seawater)	30326
Gasket, Head	30405	Pump, Impeller Kit (for 33636)	34440
Gasket, Oil Pan	30413	Pump, Repair Kit	34466
Gasket Set, Upper	30728	Pump, Seal	33043
Gasket Set, Complete	30729	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	24774	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	24939
Heat Exchanger Gasket	31291	Spare Parts Kit B	24940
Injector	30538	Starter Motor	30593
Injection Pump	30447	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	CALL	Thermostat Mounting Gasket	24323(2)
Isolators, Front	32013	Valve Cover Gasket	30407
Isolators, Rear	32013	Voltmeter	35111
Manual, Operator	N/A	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43440	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	36259
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	23329
Oil Pressure Sender	24132	Zinc	11885

W33A Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30475	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30473
Dipstick	30464	Pump, Mounting Gasket	30474
Filter, Lube Oil	35828	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	30405	Pump, Impeller Kit	34440
Gasket, Oil Pan	30413	Pump, Repair Kit	34466
Gasket Set, Upper	30728	Pump, Seal	33043
Gasket Set, Complete	30729	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	CALL
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	24939
Heat Exchanger Gasket	31291	Spare Parts Kit B	24940
Injector	30538	Starter Motor	30593
Injection Pump	30447	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30448	Thermostat Mounting Gasket	24323(2)
Isolators, Front	32013	Valve Cover Gasket	30407
Isolators, Rear	32013	Voltmeter	35111
Manual, Operator	36195	Water Temperature Meter	35108
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43440	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

35B Three Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36842
Belt, STD Alternator	30475	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	41376
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	37661	Pump, Impeller Kit	34440
Gasket, Oil Pan	30498	Pump, Repair Kit	34466
Gasket Set, Upper	37651	Pump, Seal	33043
Gasket Set, Complete	37652	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	34744
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	37649
Heat Exchanger Gasket	22851	Spare Parts Kit B	37650
Injector	30538	Starter Motor	34552
Injection Pump	37698	Starter Solenoid	36218
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30569	Thermostat Mounting Gasket	34196
Isolators, Front	36340	Valve Cover Gasket	30515
Isolators, Rear	36340	Voltmeter	37605
Manual, Operator	37435	Water Temperature Meter	37601
Manual, Parts List	36776	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

35C Three Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	43953	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	None	Panel, Instrument-Admiral	36842
Belt, STD Alternator	45232	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	
Dipstick, standard	45230	Pump, Mounting Gasket	30474
Dipstick, extended	44066		
Filter, Lube Oil	36918	Pump, Rebuild Kit	
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Fuel Lift	N/A	Pump, Mounting Gasket	30326
Gasket, Head		Pump, Impeller Kit	34440
Gasket, Oil Pan		Pump, Repair Kit	34466
Gasket Set, Upper	46900	Pump, Seal	33043
Gasket Set, Complete	46901	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	39705
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	46420
Heat Exchanger Gasket	22851	Spare Parts Kit B	47157
Injector	37091	Starter Motor	30593
Injection Pump		Starter Solenoid	30245
Injection Hardware Kit	46419	Tank, Coolant Recovery	24977
Injector Nozzle	36935	Thermostat	24688
Injector Return Line		Thermostat Mounting Gasket	34196
Isolators, Front + Rear	40510	Valve Cover Gasket	45187
Manual, Operator	44180	Voltmeter	37605
Manual, Parts List	48220	Water Temperature Meter	37601
Manual, Service	45100	Water Temperature Sender	35109
Oil Pressure Switch	37323	Water Temperature Switch	30125
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Sender	24132	Water Inj. Exhaust Elbow 90	37401
Breaker 20 Amp	24683	Zinc	11885
Breaker 10 Amp	36563		

38B Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36842
Belt, STD Alternator	30475	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	30507	Pump, Impeller Kit	34440
Gasket, Oil Pan	30499	Pump, Repair Kit	34466
Gasket Set, Upper	37693	Pump, Seal	33043
Gasket Set, Complete	37694	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	34890
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	37691
Heat Exchanger Gasket	22851	Spare Parts Kit B	37692
Injector	30538	Starter Motor	30593
Injection Pump	37688	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30570	Thermostat Mounting Gasket	34196
Isolators, Front	36341	Valve Cover Gasket	30516
Isolators, Rear	36341	Voltmeter	37605
Manual, Operator	37435	Water Temperature Meter	37601
Manual, Parts List	36776	Water Temperature Sender	35109
Manual, Technical	43440	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

42B Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36843
Belt, STD Alternator	30475	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	41376
Filter, Lube Oil	36918	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Electric Lift	30548	Pump, Mounting Gasket	30326
Gasket, Head	37687	Pump, Impeller Kit	34440
Gasket, Oil Pan	30499	Pump, Repair Kit	34466
Gasket Set, Upper	37711	Pump, Seal	33043
Gasket Set, Complete	37712	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	34890
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	37709
Heat Exchanger Gasket	22851	Spare Parts Kit B	37710
Injector	30538	Starter Motor	30593
Injection Pump	37696	Starter Solenoid	30245
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30570	Thermostat Mounting Gasket	34196
Isolators, Front	40510	Valve Cover Gasket	30516
Isolators, Rear	40511	Voltmeter	37605
Manual, Operator	37435	Water Temperature Meter	37601
Manual, Parts List	36776	Water Temperature Sender	35109
Manual, Technical	43440	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Water Inj. Exhaust Riser	37403
		Zinc	11885

44A Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	43953	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	None	Panel, Instrument-Admiral	36842
Belt, STD Alternator	45232	Preheat & Start Switch	33764
Belt, 90 Amp Alt. 2 per.	35299		
Belt, 72 Amp Alt.	37830		
Circuit Breaker	24683	Pump, Fresh Water	45231
Dipstick		Pump, Mounting Gasket	30474
Filter, Air Intake	39705		
Filter, Lube Oil	36918	Pump, Rebuild Kit	
Filter, Fuel Oil	30200	Pump, Sea Water	33636
Filter, Fuel Lift	None	Pump, Mounting Gasket	30326
Gasket, Head	45177	Pump, Impeller Kit	34440
Gasket, Oil Pan	None	Pump, Repair Kit	34466
Gasket Set, Upper	46902	Pump, Seal	33043
Gasket Set, Complete	46903	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake Filter	39705
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	36899	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	46420
Heat Exchanger Gasket	22851	Spare Parts Kit B	47158
Injector	37091	Starter Motor	30593
Injection Pump		Starter Solenoid	30245
Injection Hardware Kit	46419	Tank, Coolant Recovery	24977
Injector Nozzle	36935	Thermostat	24688
Injector Return Line		Thermostat Mounting Gasket	34196
Isolators, Front	40510	Valve Cover Gasket	45187
Isolators, Rear	40511	Voltmeter	37605
Manual, Operator	44180	Water Temperature Meter	37601
Manual, Parts List	47631	Water Temperature Sender	35109
Manual, Technical	45100	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

**W46 Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	30594	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36842
Belt, STD Alternator	30475	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	34370
Dipstick	Call Mfg	Pump, Mounting Gasket	34371
Filter, Lube Oil	35828	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	24363	Pump, Sea Water	16423
Filter, Electric Lift	30548	Pump, Mounting Gasket	11143
Gasket, Head	34283	Pump, Impeller Kit	33104
Gasket, Oil Pan	Call Mfg	Pump, Repair Kit	18172
Gasket Set, Upper	34443	Pump, Seal	18159
Gasket Set, Complete	34442	Pump, Fuel Lift	39275
Glow-plug	34380	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	34021
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	24338
Heat Exchanger	36898	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	34444
Heat Exchanger Gasket	22851	Spare Parts Kit B	34445
Injector	Call Mfg	Starter Motor	30593
Injection Pump	Call Mfg	Starter Solenoid	30245
Injection Hardware Kit	34441	Tank, Coolant Recovery	24977
Injector Nozzle	Call Mfg	Thermostat	24688
Injector Return Line	34857	Thermostat Mounting Gasket	33966
Isolators, Front	Call Mfg	Valve Cover Gasket	34296
Isolators, Rear	Call Mfg	Voltmeter	37605
Manual, Operator	34468	Water Temperature Meter	37601
Manual, Parts List	34908	Water Temperature Sender	35109
Manual, Technical	34907	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

W52 Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Instrument-Captain	N/A
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36842
Belt, STD Alternator	16001	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	32213
Dipstick	30991	Pump, Mounting Gasket	31036
Filter, Lube Oil	16655	Pump, Rebuild Kit	31054
Filter, Fuel Oil	24363	Pump, Sea Water	16423
Filter, Electric Lift	30548	Pump, Mounting Gasket	11143
Gasket, Head	30984	Pump, Impeller Kit	33104
Gasket, Oil Pan	30151	Pump, Repair Kit	18172
Gasket Set, Upper	32051	Pump, Seal	18159
Gasket Set, Complete	32082	Pump, Fuel Lift	39275
Glow-plug	14529	Remote Lube Oil Filter	21513
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	43262
Harness 15 FT. EXT 4 Pin		Solenoid, Fuel Shut Off	24338
Heat Exchanger	36905	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	32052
Heat Exchanger Gasket	31291	Spare Parts Kit B	32053
Injector	32743	Starter Motor	16762
Injection Pump	36193	Starter Solenoid	23338
Injection Hardware Kit	N/A	Tank, Coolant Recovery	24977
Injector Nozzle	24565	Thermostat	24690
Injector Return Line	34857	Thermostat Mounting Gasket	33373
Isolators, Front	Call WB	Valve Cover Gasket	30984
Isolators, Rear	Call WB	Voltmeter	23090
Manual, Operator	33507	Water Temperature Meter	35108
Manual, Parts List	32416	Water Temperature Sender	35109
Manual, Technical	32460	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 90	33067
Oil Pressure Meter	35110	Zinc	11885
Oil Pressure Sender	24132		

55A Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	40018	Panel, Instrument-Admiral	36843
Belt, Std. Alternator	32977	Preheat & Start Switch	33764
Timing Belt	41880	Pump, Fresh Water	41940
Circuit Breaker	24683	Pump, Mounting Gasket	41944
Dipstick	41829	Pump, Rebuild Kit	N/A
Filter, Air (2 Required)	39705	Pump, Sea Water	38445
Filter, Lube Oil	35828	Pump, Mounting Gasket	N/A
Filter, Fuel Oil	24363	Pump, Impeller Kit	11907
Filter, Fuel Lift	30548	Pump, Repair Kit	33329
Gasket, Head	41819	Pump, Seal	14774
Gasket, Oil Pan	N/A	Pump, Fuel Lift	39275
Gasket Set, Upper	41805	Remote Lube Oil Filter	32149
Gasket Set, Complete	41806	Solenoid, Fuel Shut Off	24338
Glow-plug	41973	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	41803
Harness 15 FT. EXT 4 Pin	36557	Spare Parts Kit B	41804
Heat Exchanger	40164	Starter Motor	30593
Heat Exchanger End Cap	22850	Starter Solenoid	30245
Heat Exchanger Gasket	22851	Tachometer, Admiral Panel	11917
Injector	41905	Tachometer, Captain Panel	36590
Injection Pump	41970	Tank, Coolant Recovery	24977
Injection Hardware Kit	41802	Thermostat	24688
Injector Nozzle	41906	Thermostat Mounting Gasket	39651
Injector Return Line	41908	Valve Cover Gasket	41818
Isolators	40511	Voltmeter	37605
Manual, Operator	41562	Water Temperature Meter	37601
Manual, Parts List	44000	Water Temperature Sender	35109
Manual, Technical	43377	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Water Inj. Exhaust Riser	37403
		Zinc	11885

W58 Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Instrument-Captain	N/A
Belt, Sea Water Pump	31152	Panel, Instrument-Admiral	36842
Belt, STD Alternator	11672	Preheat & Start Switch	33197
Circuit Breaker	24683	Pump, Fresh Water	24557
Dipstick	24608	Pump, Mounting Gasket	24473
Filter, Lube Oil	16655	Pump, Rebuild Kit	24538
Filter, Fuel Oil	24363	Pump, Sea Water	24102
Filter, Electric Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	31764	Pump, Impeller Kit	33112
Gasket, Oil Pan	24516	Pump, Repair Kit	24652
Gasket Set, Upper	24575	Pump, Seal	24649
Gasket Set, Complete	24576	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	21513
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	38824
Harness 15 FT. EXT 4 Pin	N/A	Solenoid, Fuel Shut Off	24338
Heat Exchanger	36889	Solenoid, Preheat	24639
Heat Exchanger End Cap	31290	Spare Parts Kit A	24572
Heat Exchanger Gasket	31291	Spare Parts Kit B	24573
Injector	24563	Starter Motor	16762
Injection Pump	24569	Starter Solenoid	23338
Injection Hardware Kit	24574	Tank, Coolant Recovery	24977
Injector Nozzle	24565	Thermostat	24690
Injector Return Line	20950	Thermostat Mounting Gasket	24323
Isolators, Front	11687	Valve Cover Gasket	24343
Isolators, Rear	11687	Voltmeter	23090
Manual, Operator	33507	Water Temperature Meter	35108
Manual, Parts List	24577	Water Temperature Sender	35109
Manual, Technical	24331	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 90	33067
Oil Pressure Meter	35110	Zinc	11885
Oil Pressure Sender	24132		

**63B Four Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	39790	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36842
Belt, Std. Alternator	11672	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	32213
Dipstick	30991	Pump, Mounting Gasket	31036
Filter, Lube Oil	35828	Pump, Rebuild Kit	31054
Filter, Fuel Oil	24363	Pump, Sea Water	16423
Filter, Fuel Lift	30548	Pump, Mounting Gasket	11143
Gasket, Head	30987	Pump, Impeller Kit	33104
Gasket Set, Oil Pan	31051	Pump, Repair Kit	18172
Gasket Set, Upper	38773	Pump, Seal	18159
Gasket Set, Complete	38774	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Fuel Shut Off	<u>24338</u>
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Preheat	24639
Heat Exchanger	38300	Spare Parts Kit A	38775
Heat Exchanger End Cap	22850	Spare Parts Kit B	38776
Heat Exchanger Gasket	22851	Starter Motor	30593
Injector	32743	Starter Solenoid	30245
Injection Pump	36193	Tank, Coolant Recovery	24977
Injection Hardware Kit	32050	Thermostat	24690
Injector Nozzle	32744	Thermostat Mounting Gasket	33373
Injector Return Line	31020	Valve Cover Gasket	30984
Isolators	40513	Voltmeter	37605
Manual, Operator	38922	Water Temperature Meter	37601
Manual, Parts List	38824	Water Temperature Sender	35109
Manual, Technical	32460	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	N/A
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	N/A
Oil Pressure Sender	24132	Water Inj. Exhaust Elbow 70	38760
		Zinc	11885

**63C Four Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	39790	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	N/A	Panel, Instrument-Admiral	36842
Belt, Std. Alternator	11672	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	32213
Dipstick	30991	Pump, Mounting Gasket	31036
Filter, Lube Oil	35828	Pump, Rebuild Kit	31054
Filter, Fuel Oil	24363	Pump, Sea Water	16423
Filter, Fuel Lift	30548	Pump, Mounting Gasket	11143
Gasket, Head	43180	Pump, Impeller Kit	33104
Gasket Set, Oil Pan	43213	Pump, Repair Kit	18172
Gasket Set, Upper	41787	Pump, Seal	18159
Gasket Set, Complete	41788	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32149
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Fuel Shut Off	24338
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Preheat	24639
Heat Exchanger	38300	Spare Parts Kit A	38775
Heat Exchanger End Cap	22850	Spare Parts Kit B	41786
Heat Exchanger Gasket	22851	Starter Motor	30593
Injector	43211	Starter Solenoid	30245
Injection Pump	43183	Tank, Coolant Recovery	24977
Injection Hardware Kit	32050	Thermostat	24690
Injector Nozzle	43212	Thermostat Mounting Gasket	33373
Injector Return Line	31020	Valve Cover Gasket	30984
Isolators	40513	Voltmeter	37605
Manual, Operator	38922	Water Temperature Meter	37601
Manual, Parts List	38824	Water Temperature Sender	35109
Manual, Technical	32460	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Inj. Exhaust Elbow 45	N/A
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 90	N/A
Oil Pressure Sender	24132	Water Inj. Exhaust Elbow 70	38760
		Zinc	11885

**W70 Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	24684	Panel, Instrument-Captain	N/A
Belt, Sea Water Pump	16446	Panel, Instrument-Admiral	36842
Belt, STD Alternator	32977	Preheat & Start Switch	N/A
Circuit Breaker	24683	Pump, Fresh Water	32711
Dipstick	32646	Pump, Mounting Gasket	32712
Filter, Lube Oil	32874	Pump, Rebuild Kit	NA
Filter, Fuel Oil	24363	Pump, Sea Water	11353
Filter, Electric Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	32641	Pump, Impeller Kit	11907
Gasket, Oil Pan	Call Mfg	Pump, Repair Kit	33329
Gasket Set, Upper	32555	Pump, Seal	14774
Gasket Set, Complete	32556	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32973
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37449
Harness 15 FT. EXT 4 Pin	N/A	Solenoid, Fuel Shut Off	24338
Heat Exchanger	36889	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	32557
Heat Exchanger Gasket	22851	Spare Parts Kit B	32558
Injector	32743	Starter Motor	N/A
Injection Pump	32748	Starter Solenoid	N/A
Injection Hardware Kit	33094	Tank, Coolant Recovery	24977
Injector Nozzle	32744	Thermostat	24690
Injector Return Line	20950	Thermostat Mounting Gasket	33373
Isolators, Front	33719	Valve Cover Gasket	32939
Isolators, Rear	33719	Voltmeter	23090
Manual, Operator	33507	Water Temperature Meter	35108
Manual, Parts List	33620	Water Temperature Sender	35109
Manual, Technical	33355	Water Temperature Switch	30125
Oil Pressure Switch	34761	Water Inj. Exhaust Elbow 90	33067
Oil Pressure Meter	35110	Zinc	11885
Oil Pressure Sender	24132		

71B Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	31152	Panel, Instrument-Admiral	36842
Belt, STD Alternator	32977	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	24557
Dipstick	24570	Pump, Mounting Gasket	24478
Filter, Lube Oil	35828	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	24363	Pump, Sea Water	38445
Filter, Fuel Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	24344	Pump, Impeller Kit	11907
Gasket, Oil Pan	24516	Pump, Repair Kit	33329
Gasket Set, Upper	39551	Pump, Seal	14774
Gasket Set, Complete	39552	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37782
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	24338
Heat Exchanger	38300	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	39548
Heat Exchanger Gasket	22851	Spare Parts Kit B	39549
Injector	24563	Starter Motor	30593
Injection Pump	24569	Starter Solenoid	30245
Injection Hardware Kit	24574	Tank, Coolant Recovery	24977
Injector Nozzle	24565	Thermostat	24690
Injector Return Line	24528	Thermostat Mounting Gasket	33373
Isolators	40512	Valve Cover Gasket	24343
Manual, Operator	38922	Voltmeter	37605
Manual, Parts List	39904	Water Temperature Meter	37601
Manual, Technical	43317	Water Temperature Sender	35109
Oil Pressure Switch	37323	Water Temperature Switch	30125
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 45	N/A
Oil Pressure Sender	24132	Water Inj. Exhaust Elbow 90	N/A
Water Inj. Exhaust Elbow 70	38760	Zinc	11885

71C Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	13810	Panel, Instrument-Admiral	36842
Belt, STD Alternator	39181	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	32711
Dipstick	41351	Pump, Mounting Gasket	41376
Filter, Lube Oil	40154	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	24363	Pump, Sea Water	38445
Filter, Fuel Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	41348	Pump, Impeller Kit	11907
Gasket, Oil Pan	32716	Pump, Repair Kit	33329
Gasket Set, Upper	41392	Pump, Seal	14774
Gasket Set, Complete	41393	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32973
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37782
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	41372
Heat Exchanger	38300	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	41390
Heat Exchanger Gasket	22851	Spare Parts Kit B	41391
Injector	41376	Starter Motor	38384
Injection Pump	41370	Starter Solenoid	39523
Injection Hardware Kit	41394	Tank, Coolant Recovery	24977
Injector Nozzle	41368	Thermostat	24690
Injector Return Line	32745	Thermostat Mounting Gasket	33373
Isolators	40511	Valve Cover Gasket	32639
Manual, Operator	38922	Voltmeter	37605
Manual, Parts List	42000	Water Temperature Meter	37601
Manual, Technical	43317	Water Temperature Sender	35109
Oil Pressure Switch	37323	Water Temperature Switch	30125
Oil Pressure Meter	37603	Water Inj. Exhaust Elbow 45	N/A
Oil Pressure Sender	24132	Water Inj. Exhaust Elbow 90	N/A
Water Inj. Exhaust Elbow 70	38760	Zinc	11885

W80 Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	19270	Panel, Instrument-Captain	N/A
Belt, Sea Water Pump	11195	Panel, Instrument-Admiral	36842
Belt, STD Alternator	11195	Preheat & Start Switch	11957
Circuit Breaker	20947	Pump, Fresh Water	17798
Dipstick	14000	Pump, Mounting Gasket	17824
Filter, Lube Oil	16655	Pump, Rebuild Kit	17898
Filter, Fuel Oil	14776	Pump, Sea Water	16432
Filter, Electric Lift	N/A	Pump, Mounting Gasket	11143
Gasket, Head	18030	Pump, Impeller Kit	33779
Gasket, Oil Pan	17816	Pump, Repair Kit	15131
Gasket Set, Upper	17918	Pump, Seal	N/A
Gasket Set, Complete	N/A	Pump, Fuel Lift	17933
Glow-plug		Remote Lube Oil Filter	21513
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	15236
Harness 15 FT. EXT 4 Pin	N/A	Solenoid, Fuel Shut Off	24338
Heat Exchanger	17264	Solenoid, Preheat	24639
Heat Exchanger End Cap	N/A	Spare Parts Kit A	15167
Heat Exchanger Gasket	16567	Spare Parts Kit B	19093
Injector	17956	Starter Motor	17950
Injection Pump	17955	Starter Solenoid	17958
Injection Hardware Kit	24282	Tank, Coolant Recovery	24977
Injector Nozzle		Thermostat	24960
Injector Return Line	20950	Thermostat Mounting Gasket	17590
Isolators, Front	11782	Valve Cover Gasket	17795
Isolators, Rear	11782	Voltmeter	N/A
Manual, Operator	33507	Water Temperature Meter	11545
Manual, Parts List	15162	Water Temperature Sender	11543
Manual, Technical	13315	Water Temperature Switch	13382
Oil Pressure Switch	11552	Water Inj. Exhaust Elbow 45	20673
Oil Pressure Meter	11544	Zinc	11885
Oil Pressure Sender	11542		

82B Four Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	13810	Panel, Instrument-Admiral	36842
Belt, STD Alternator	39181	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	32711
Dipstick	32646	Pump, Mounting Gasket	32712
Filter, Lube Oil	40154	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	24363	Pump, Sea Water	38445
Filter, Fuel Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	32641	Pump, Impeller Kit	11907
Gasket, Oil Pan	32716	Pump, Repair Kit	33329
Gasket Set, Upper	32675	Pump, Seal	14774
Gasket Set, Complete	39676	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32973
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37449
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	24338
Heat Exchanger	38300	Solenoid, Preheat	24639
Heat Exchanger End Cap	22850	Spare Parts Kit A	39324
Heat Exchanger Gasket	22851	Spare Parts Kit B	39325
Injector	32743	Starter Motor	38384
Injection Pump	32748	Starter Solenoid	39523
Injection Hardware Kit	33094	Tank, Coolant Recovery	24977
Injector Nozzle	32744	Thermostat	24690
Injector Return Line	32745	Thermostat Mounting Gasket	33373
Isolators	36334	Valve Cover Gasket	32639
Manual, Operator	38922	Voltmeter	35111
Manual, Parts List	40000	Water Temperature Meter	35108
Manual, Technical	40485	Water Temperature Sender	35109
Oil Pressure Switch	37323	Water Temperature Switch	30125
Oil Pressure Meter	35110	Water Inj. Exhaust Elbow 70	39334
Oil Pressure Sender	24132	Zinc	11885

**90A Four Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	39790	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	31152	Panel, Instrument-Admiral	36842
Belt, STD Alternator	39181	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	40362
Dipstick	40042	Pump, Mounting Gasket	40363
Filter, Lube Oil	40154	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	14776	Pump, Sea Water	38445
Filter, Fuel Oil, Spin-ON	45278		
Filter, Fuel Lift	N/A	Pump, Mounting Gasket	N/A
Gasket, Head	40250	Pump, Impeller Kit	11907
Gasket, Oil Pan	40276	Pump, Repair Kit	33329
Gasket Set, Upper	40385	Pump, Seal	14774
Gasket Set, Complete	40386	Pump, Fuel Lift	41443
Glow-plug	40368	Remote Lube Oil Filter	32973
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37782
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	23041
Heat Exchanger	40164	Solenoid, Preheat	40369
Heat Exchanger End Cap	22850	Spare Parts Kit A	42627
Heat Exchanger Gasket	22851	Spare Parts Kit B	
Injector	40330	Starter Motor	38384
Injection Pump	40342	Starter Solenoid	39523
Injection Hardware Kit	40390	Tank, Coolant Recovery	24977
Injector Nozzle	40331	Thermostat	24690
Injector Return Line	40346	Thermostat Mounting Gasket	39651
Isolators	40513	Valve Cover Gasket	40242
Manual, Operator	40588	Voltmeter	37605
Manual, Parts List	41512	Water Temperature Meter	37601
Manual, Technical		Water Temperature Sender	35109
Oil Pressure Switch	37323	Water Temperature Switch	39550
Oil Pressure Meter	37603	Water Injected Exhaust Elbow	39334
Oil Pressure Sender	24132	Zinc	11885

**108B Six Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	24684	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	15768	Panel, Instrument-Admiral	36842
Belt, STD Alternator	32544	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	32711
Dipstick	32759	Pump, Mounting Gasket	37212
Filter, Lube Oil	40154	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	24363	Pump, Sea Water	38445
Filter, Fuel Lift	30548	Pump, Mounting Gasket	N/A
Gasket, Head	32818	Pump, Impeller Kit	11907
Gasket, Oil Pan	32790	Pump, Repair Kit	33329
Gasket Set, Upper	40403	Pump, Seal	14774
Gasket Set, Complete	40404	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32973
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37784
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	24338
Heat Exchanger	39230	Solenoid, Preheat	24639
Heat Exchanger End Cap	33299	Spare Parts Kit A	39429
Heat Exchanger Gasket	33330	Spare Parts Kit B	40402
Injector	24563	Starter Motor	38384
Injection Pump	32894	Starter Solenoid	39523
Injection Hardware Kit	33095	Tank, Coolant Recovery	24977
Injector Nozzle	24565	Thermostat	32872
Injector Return Line	33058	Thermostat Mounting Gasket	38225
Isolators To 1/1/1995	36334	Valve Cover Gasket	32755
Isolators From 1/1/1995	40512	Voltmeter	37605
Manual, Operator	38922	Water Temperature Meter	37601
Manual, Parts List	41200	Water Temperature Sender	35109
Manual, Technical	33355	Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Injected Exhaust Elbow	39334
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

**108C Six Marine Diesel Engine
Fast Moving Parts List**

Description	Part #	Description	Part #
Alternator	24684	Panel, Instrument-Captain	36473
Belt, Sea Water Pump	15768	Panel, Instrument-Admiral	36842
Belt, STD Alternator	32544	Preheat & Start Switch	33764
Circuit Breaker	24683	Pump, Fresh Water	32711
Dipstick	32759	Pump, Mounting Gasket	37212
Filter, Lube Oil	40154	Pump, Rebuild Kit	N/A
Filter, Fuel Oil	24363	Pump, Sea Water	38445
		Pump, Mounting Gasket	N/A
Gasket, Head	32818	Pump, Impeller Kit	11907
Gasket, Oil Pan	32790	Pump, Repair Kit	33329
Gasket Set, Upper	40403	Pump, Seal	14774
Gasket Set, Complete	40404	Pump, Fuel Lift	39275
Glow-plug	24353	Remote Lube Oil Filter	32973
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	37784
Harness 15 FT. EXT 4 Pin	36557	Solenoid, Fuel Shut Off	24338
Heat Exchanger	39230	Solenoid, Preheat	24639
Heat Exchanger End Cap	33299	Spare Parts Kit A	40735
Heat Exchanger Gasket	33330	Spare Parts Kit B	40736
Injector	24563	Starter Motor	38384
Injection Pump	32894	Starter Solenoid	39523
Injection Hardware Kit	40742	Tank, Coolant Recovery	24977
Injector Nozzle	24565	Thermostat	32872
Injector Return Line	33058	Thermostat Mounting Gasket	38225
Isolators To 1/1/1995	36334	Valve Cover Gasket	32755
Isolators From 1/1/1995	40512	Voltmeter	37605
Manual, Operator	38922	Water Temperature Meter	37601
Manual, Parts List	41200	Water Temperature Sender	35109
Manual, Technical		Water Temperature Switch	30125
Oil Pressure Switch	37323	Water Injected Exhaust Elbow	39334
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

W120 Marine Diesel Engine Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	19270	Panel, Instrument-Captain	N/A
Belt, Sea Water Pump	11195	Panel, Instrument-Admiral	36842
Belt, STD Alternator	11195	Preheat & Start Switch	11957
Circuit Breaker	20947	Pump, Fresh Water	17798
Dipstick	14000	Pump, Mounting Gasket	17824
Filter, Lube Oil	16655	Pump, Rebuild Kit	17898
Filter, Fuel Oil	19397	Pump, Sea Water	16432
Filter, Electric Lift	N/A	Pump, Mounting Gasket	11143
Gasket, Head	18029	Pump, Impeller Kit	33779
Gasket, Oil Pan	17815	Pump, Repair Kit	15131
Gasket Set, Upper	17919	Pump, Seal	N/A
Gasket Set, Complete	N/A	Pump, Fuel Lift	17933
Glow-plug		Remote Lube Oil Filter	21513
Harness 15 FT. EXT 8 Pin	30760	Silencer, Air Intake	15236
Harness 15 FT. EXT 4 Pin	N/A	Solenoid, Fuel Shut Off	24338
Heat Exchanger	16386	Solenoid, Preheat	24639
Heat Exchanger End Cap	N/A	Spare Parts Kit A	15167
Heat Exchanger Gasket	16567	Spare Parts Kit B	19108
Injector	17956	Starter Motor	17950
Injection Pump	17954	Starter Solenoid	17958
Injection Hardware Kit	24282	Tank, Coolant Recovery	24977
Injector Nozzle		Thermostat	24960
Injector Return Line	20950	Thermostat Mounting Gasket	17590
Isolators, Front	11782	Valve Cover Gasket	17794
Isolators, Rear	11782	Voltmeter	N/A
Manual, Operator	N/A	Water Temperature Meter	11545
Manual, Parts List	15162	Water Temperature Sender	11543
Manual, Technical	13315	Water Temperature Switch	13382
Oil Pressure Switch	11552	Water Inj. Exhaust Elbow 45	20673
Oil Pressure Meter	11544	Zinc	11885
Oil Pressure Sender	11542		

**Century Series Marine Diesel Engines:
Fast Moving Parts List**

Description	4 Cyl	6 Cyl	Description	4 Cyl	6 Cyl
Alternator, 12V 50A-24V 42A	39139		Oil Pressure Sender 12V	24132	
Alternator, 24V 42A	38530		Oil Pressure Sender 24V	42161	
Belt, Guard	44044		Panel Kit, Admiral 12V	36842	
Belt, Water Pump - Alternator	44385		Panel Kit, Admiral 24V	46637	
Circuit Breaker 20A 12VDC	24683		Panel, Genset Control 12V	36539	
Circuit Breaker 10A 24VDC	20946		Panel, Genset Control 24V	42162	
Dipstick	43577		Panel, Remote Start/Stop 15 Pin	44336	
Emergency Stop Switch	33259		Pump, Fresh Water		
Exhaust Temperature Switch	32923		Pump, Mounting Gasket		
Filter, Air	43930		Pump, Rebuild Kit		
Filter, Fuel Oil	46140	46146	Pump, Sea Water	43514	
Filter, Lube Oil	44995	44998	Pump, Mounting O-Ring	44183	
Fuse 8 AMP	33769		Pump, Impeller Kit		
Gasket, Head			Pump, Repair Kit		
Gasket, Oil Pan	45444	45445	Remote Lube Oil Filter	44995	44998
Gasket Set, Upper			Solenoid, Fuel Control 12V	303007	
Gasket Set, Complete			Solenoid, Fuel Control 24V	39746	
Glow-plug		45124	Solenoid, Fuel Stop 12V	45561	
Harness Ext 15 Pin 15'-30'	44347	44799	Solenoid, Fuel Stop 24V	45562	
Harness 15 FT. EXT 8 Pin	30760		Solenoid, Preheat 12V	24639	
Harness 15 FT. EXT 4 Pin	36557		Solenoid, Preheat 24V	22249	
Heat Exchanger	44791	44792	Spare Parts Kit A		
Heat Exchanger O-Ring	44131		Spare Parts Kit B		
Heat Exchanger End Cap	42053		Starter Motor 12V-24V	43472	39417
Heat Exchanger Gasket	42054		Switch, Preheat & Start	24732	
Hour-meter	36192	42159	Switch, Stop	24731	
Injector			Tachometer, Admiral Panel	39826	
Injection Pump			Tank, Coolant Recovery	24977	
Injection Hardware Kit			Thermostat	45486	
Injector Nozzle			Thermostat Mounting Gasket	42042	
Injector Return Line			Valve Cover Gasket		
Isolators, Front	40513	42490	Voltage Regulator		
Isolators, Rear	45140		Voltmeter	35111	42156
Manual, Operator	45139		Water Temperature Meter 12V-24V	35108	
Manual, Technical			Water Temperature Meter 12V-24V	42158	
Oil Cooler	36650		Water Temperature Switch	39550	
Oil Pressure Switch #5	37323		Water Inj. Exhaust Elbow Turbo	44493	
Oil Pressure Switch #10	11552		Water Inj. Exhaust Elbow Nat. Asp.	44495	
Oil Pressure Meter 12V	35110		Wiring Harness	44782	
Oil Pressure Meter 24V	42157		Zinc	11885	