

3.0 WMD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	32939	Panel, Genset Control	32340
Belt, Sea Water Pump	32942	Panel, Remote Stop Start	24943
Belt, STD Alternator	13585	Preheat & Start Switch	24732
Circuit Breaker	24683	Porn, Fresh Water	33197
Rectifier, Bridge	43649	Pump, Mounting Gasket	33198
Dipstick	33170	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	32617
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	N/A
Filter, Lube Oil	36918	Pump, Impeller Kit	32620
Filter, Fuel Oil	30200	Pump, Repair Kit	40455
Filter, Electric Lift	30548	Pump, Seal	33043
Gasket, Head	33162	Pump, Fuel Lift	39275
Gasket, Oil Pan	33169	Rectifier	43649
Gasket Set, Upper	33075	Remote lube Oil Filter	32149
Gasket Set, Complete	33076	Silencer, Air Intake	32434
Glow Plug	33204	Solenoid, Fuel Shut Off	23041
Harness 15 FT" EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	36895	Spare Parts Kit A	33077
Heat Exchanger, End Cap	33297	Spare Parts Kit B	33078
Heat Exchanger, Gasket	33298	Starter Motor	32940
Injector	33157	Starter Solenoid	30245
Injector Pump	33181	Stop Switch	24731
Injection Hardware Kit	33079	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	33002	Thermostat Mounting Gasket	32586
Isolators, Front	24776	Valve Cover Gasket	33164
Isolators, Rear	24776	Voltmeter	35111
Manual, Operators	33105	Water Temperature Meter	37601
Manual, Parts List	33404	Water Temperature Sender	35109
Manual, Technical	33403	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water In"" Exhaust Elbow 45	33067
Oil Pressure Meter	35110	Zinc	11885
Oil Pressure Sender	24132	Manifold, Exhaust	37309

3.8 BCDT Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	NA	Panel, Genset Control	46149
Belt, Sea Water Pump	NA	Panel, Remote Stop/Start	
Belt, STD Alternator	NA	Preheat & Start Switch	
Circuit Breaker	50505	Pump, Fresh Water	
Battery Charger	46061	Pump, Mounting Gasket	
Diode		Pump, Rebuild Kit	
Dipstick	45830	Pump, Sea Water	45765
Electronic Voltage Regulator		Pump, Mounting Gasket	N/A
Emergency Stop Switch		Pump, Impeller Kit	32620
Exhaust Temperature Switch		Gasket, Sea Water Cover	45767
Filter Assembly, Lube Oil	45823	Pump, Repair Kit	40455
Filter, Fuel (primary on engine)	44769	Pump, Seal	33043
Filter, Fuel (secondary in S.G.)	44770	Pump, Fuel Lift	45610
Gasket, Head	45849	Rectifier	
Gasket, Oil Pan		Remote Lube Oil Filter	
Gasket Set, Upper		Silencer, Air Intake	
Gasket Set, Complete	45825	Solenoid, Fuel Shut Off	45890
Glowplug		Solenoid, Preheat	
Harness 15 FT. EXT 8 Pin		Spare Parts Kit A	
Heat Exchanger		Spare Parts Kit B	
Heat Exchanger End Cap		Starter Motor	45782
Heat Exchanger Gasket		Starter Solenoid	
Injector	45758	Stop Switch	
Injection Pump	45755	Tank, Coolant Recovery	
Injection Hardware Kit		Thermostat	45786
Injector Nozzle	45760	Thermostat Mounting Gasket	45833
Injector Return Line	45832	Valve Cover Gasket	45834
Isolators, Front		Voltmeter	
Isolators, Rear		Water Temperature Meter	
Manual, Owner	44284	Water Temperature Sender	
Manual, Parts List		Water Temperature Switch	45790
Manual, Technical		Water Injected Exhaust Elbow 45	
Oil Pressure Switch	45611	Water Injected Exhaust Elbow 90	
Oil Pressure Meter		Zinc	
Oil Pressure Sender		Plug, Welch 18 MM	299905
		Harness, wiring	46118

4.0 BCD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator		Oil Pressure Meter	37603
Belt, Sea Water Pump	30376	Oil Pressure Sender	24132
Belt, STD Alternator		Panel, Genset Control	36539
Circuit Breaker	24683	Panel, Remote Stop/Start	24943
Diode	35971	Preheat & Start Switch	24732
Dipstick	37072	Pump, Fresh Water	37015
Electronic Voltage Regulator	30257	Pump, Mounting Gasket	36957
Emergency Stop Switch	33259	Pump, Rebuild Kit	N/A
Exhaust Temperature Switch	32923	Pump, Sea Water	33636
Filter, Lube Oil	36918	Pump, Mounting Gasket	30326
Filter, Fuel Oil	30200	Pump, Impeller Kit	34440
Filter, Electric Lift	30548	Pump, Repair Kit	34466
Gasket, Head	38848	Pump, Seal	33043
Gasket, Head (B Model)	43550	Pump, Fuel Lift	39275
Gasket, Oil Pan	36988	Rectifier	43649
Gasket Set, Upper	38352	Remote Lube Oil Filter	40078
Gasket Set, Upper (B Model)	43560	Silencer, Air Intake	37191
Gasket Set, Complete	38353	Solenoid, Fuel Shut Off	37100
Gasket Set, Complete (B Model)	43561	Solenoid, Preheat	24639
Glowplug	36961	Spare Parts Kit A	38350
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit B	38351
Heat Exchanger	38147	Spare Parts Kit B (B Model)	43652
Heat Exchanger End Cap	22850	Starter Motor	34552
Heat Exchanger Gasket	22851	Starter Solenoid	36218
Injector	37091	Stop Switch	24731
Injection Pump	38459	Tank, Coolant Recovery	24977
Injection Pump (B Model)	43555	Thermostat	37043
Injection Hardware Kit	37121	Thermostat Mounting Gasket	36956
Injector Nozzle	36935	Valve Cover Gasket	37007
Injector Return Line	37099	Voltmeter	37605
Isolators, Front	24776	Water Temperature Meter	37601
Isolators, Rear	24776	Water Temperature Sender	35109
Manual, Operator	38134	Water Temperature Switch	39550
Manual, Parts List	38677	Water Injected Exhaust Elbow 45	38114
Manual, Technical	38673	Water Injected Exhaust Elbow 90	N/A
Oil Pressure Switch	37323	Zinc	11885

4.4 WMD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Oil Pressure Sender	24132
Belt, Sea Water Pump	N/A	Panel, Genset Control	24873
Belt, STD Alternator	30376	Panel, Remote Stop/Start	24943
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	35971	Pump, Fresh Water	30379
Dipstick	30374	Pump, Mounting Gasket	30326
Electronic Voltage Regulator	N/A	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	37431
Exhaust Temperature Switch	30096	Pump, Mounting Gasket	30326
Filter, Lube Oil	36918	Pump, Impeller Kit	34440
Filter, Fuel Oil	30200	Pump, Repair Kit	34466
Filter, Electric Lift	30548	Pump, Seal	33043
Gasket, Head	30339	Pump, Fuel Lift	39275
Gasket, Oil Pan	30350	Rectifier	43649
Gasket Set, Upper	30722	Remote Lube Oil Filter	32149
Gasket Set, Complete	30723	Silencer, Air Intake	24920
Glowplug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	36904	Spare Parts Kit A	24933
Heat Exchanger End Cap	33297	Spare Parts Kit B	24934
Heat Exchanger Gasket	33298	Starter Motor	30593
Injector	30538	Starter Solenoid	30245
Injection Pump	31283	Stop Switch	24731
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30367	Thermostat Mounting Gasket	24323
Isolators, Front	24776	Valve Cover Gasket	30342
Isolators, Rear	24776	Voltmeter	37605
Manual, Operator	35729	Water Temperature Meter	37601
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 45	33067
Oil Pressure Meter	37603	Zinc	11885

5.0 BCDA/BCDB Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator		Oil Pressure Meter	37603
Belt, Sea Water Pump	30376	Oil Pressure Sender	24132
Belt, STD Alternator		Panel, Genset Control	36539
Circuit Breaker	24683	Panel, Remote Stop/Start	24943
Diode	35971	Preheat & Start Switch	24732
Dipstick	37072	Pump, Fresh Water	37015
Electronic Voltage Regulator	30257	Pump, Mounting Gasket	36957
Emergency Stop Switch	33259	Pump, Rebuild Kit	N/A
Exhaust Temperature Switch	32923	Pump, Sea Water	33636
Filter, Lube Oil	36918	Pump, Mounting Gasket	30326
Filter, Fuel Oil	30200	Pump, Impeller Kit	34440
Filter, Electric Lift	30548	Pump, Repair Kit	34466
Gasket, Head	38848	Pump, Seal	33043
Gasket, Head (B Model)	43550	Pump, Fuel Lift	39275
Gasket, Oil Pan	36988	Rectifier	43649
Gasket Set, Upper	38352	Remote Lube Oil Filter	40078
Gasket Set, Upper (B Model)	43560	Silencer, Air Intake	37191
Gasket Set, Complete	38353	Solenoid, Fuel Shut Off	37100
Gasket Set, Complete (B Model)	43561	Solenoid, Preheat	24639
Glowplug	36961	Spare Parts Kit A	38350
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit B	38351
Heat Exchanger	38147	Spare Parts Kit B (B Model)	43652
Heat Exchanger End Cap	22850	Starter Motor	34552
Heat Exchanger Gasket	22851	Starter Solenoid	36218
Injector	37091	Stop Switch	24731
Injection Pump	38459	Tank, Coolant Recovery	24977
Injection Pump (B Model)	43555	Thermostat	37043
Injection Hardware Kit	37121	Thermostat Mounting Gasket	36956
Injector Nozzle	36935	Valve Cover Gasket	37007
Injector Return Line	37099	Voltmeter	37605
Isolators, Front	24776	Water Temperature Meter	37601
Isolators, Rear	24776	Water Temperature Sender	35109
Manual, Operator	38134	Water Temperature Switch	39550
Manual, Parts List	38677	Water Injected Exhaust Elbow 45	38114
Manual, Technical	38673	Water Injected Exhaust Elbow 90	N/A
Oil Pressure Switch	37323	Zinc	11885

6.0 BCD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Oil Pressure Sender	24132
Belt, Sea Water Pump	N/A	Panel, Genset Control	24873
Belt, STD Alternator	30592	Panel, Remote Stop/Start	24943
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	35971	Pump, Fresh Water	30379
Dipstick	30587	Pump, Mounting Gasket	30326
Electronic Voltage Regulator	N/A	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33529	Pump, Sea Water	37431
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	30326
Filter, Lube Oil	36918	Pump, Impeller Kit	34440
Filter, Fuel Oil	30200	Pump, Repair Kit	40455
Filter, Electric Lift	30548	Pump, Seal	33043
Gasket, Head	33786	Pump, Fuel Lift	39275
Gasket, Oil Pan	30498	Rectifier	43649
Gasket Set, Upper	33775	Remote Lube Oil Filter	32149
Gasket Set, Complete	33776	Silencer, Air Intake	34727
Glowplug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	33891	Spare Parts Kit A	35010
Heat Exchanger End Cap	33297	Spare Parts Kit B	35011
Heat Exchanger Gasket	33298	Starter Motor	34552
Injector	30538	Starter Solenoid	36218
Injection Pump	31283	Stop Switch	24731
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30367	Thermostat Mounting Gasket	34196
Isolators, Front	24776	Valve Cover Gasket	30515
Isolators, Rear	24776	Voltmeter	37605
Manual, Operator	35729	Water Temperature Meter	37601
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 45	33067
Oil Pressure Meter	37603	Zinc	11885

7.6 BTD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	40963	Oil Pressure Sender	24132
		Panel, Genset Control	36539
Belt, STD Alternator	45232	Panel, Remote Stop/Start	36539
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	35931	Pump, Fresh Water	37015
Dipstick	37072	Pump, Mounting Gasket	36957
Electronic Voltage Regulator	34410	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	33636
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	30326
Filter, Lube Oil	36918	Pump, Impeller Kit	34440
Filter, Fuel Oil	30200	Pump, Repair Kit	34466
Filter, Electric Lift	30548	Pump, Seal	33043
Gasket, Head	36969	Pump, Fuel Lift	39275
Gasket, Oil Pan	36988	Rectifier	43649
Gasket Set, Upper	37116	Remote Lube Oil Filter	40078
Gasket Set, Complete	37117	Silencer, Air Intake	37191
Glowplug	36391	Solenoid, Fuel Shut Off	37100
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	38147	Spare Parts Kit A	41517
Heat Exchanger End Cap	22850	Spare Parts Kit B	41518
Heat Exchanger Gasket	22851	Starter Motor	34552
Injector	37091	Starter Solenoid	36218
Injection Pump	37103	Stop Switch	24731
Injection Hardware Kit	37121	Tank, Coolant Recovery	24977
Injector Nozzle	36935	Thermostat	37043
Injector Return Line	37099	Thermostat Mounting Gasket	36956
Isolators, Front	24776	Valve Cover Gasket	37007
Isolators, Rear	24776	Voltmeter	37605
Manual, Operator	40457	Water Temperature Meter	37601
Manual, Parts List	41800	Water Temperature Sender	35109
Manual, Technical	38673	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 45	38114
Oil Pressure Meter	37603	Zinc	11885

7.7 & 8.0 WMD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Oil Pressure Sender	24132
Belt, Sea Water Pump	N/A	Panel, Genset Control	24873
Belt, STD Alternator	30592	Panel, Remote Stop/Start	24943
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	N/A	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Electronic Voltage Regulator	NA	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	37431
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	30326
Filter, Lube Oil	36918	Pump, Impeller Kit	34440
Filter, Fuel Oil	30200	Pump, Repair Kit	34466
Filter, Electric Lift	30548	Pump, Seal	33043
Gasket, Head	30509	Pump, Fuel Lift	39275
Gasket, Oil Pan	30498	Rectifier	43649
Gasket Set, Upper	30726	Remote Lube Oil Filter	32149
Gasket Set, Complete	30725	Silencer, Air Intake	34727
Glowplug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	24774	Spare Parts Kit A	24935
Heat Exchanger End Cap	31291	Spare Parts Kit B	24936
Heat Exchanger Gasket	31290	Starter Motor	30593
Injector	30538	Starter Solenoid	30245
Injection Pump	30549	Stop Switch	24731
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30569	Thermostat Mounting Gasket	24323
Isolators, Front	21529	Valve Cover Gasket	30515
Isolators, Rear	21529	Voltmeter	37605
Manual, Operator	32461	Water Temperature Meter	37601
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 45	33067
Oil Pressure Meter	37603	Zinc	11885

8.0 BTD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Genset Control	24873
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	24943
Belt, STD Alternator	30475	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	30591
Diode	35931	Pump, Mounting Gasket	30474
Dipstick	30587	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	34410	Pump, Sea Water	33636
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	36918	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	30509	Rectifier	43649
Gasket, Oil Pan	30498	Remote Lube Oil Filter	32149
Gasket Set, Upper	30724	Silencer, Air Intake	34727
Gasket Set, Complete	30725	Solenoid, Fuel Shut Off	23041
Glowplug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	35010
Heat Exchanger	36903	Spare Parts Kit B	35012
Heat Exchanger End Cap	22850	Starter Motor	34552
Heat Exchanger Gasket	22851	Starter Solenoid	36218
Injector	30538	Stop Switch	24731
Injection Pump	30549	Tank, Coolant Recovery	24977
Injection Hardware Kit	33093	Thermostat	24688
Injector Nozzle	30297	Thermostat Mounting Gasket	34196
Injector Return Line	34610	Valve Cover Gasket	30515
Isolators, Front	24776	Voltmeter	35111
Isolators, Rear	24776	Water Temperature Meter	35108
Manual, Operator	36746	Water Temperature Sender	35109
Manual, Parts List	32139	Water Temperature Switch	39550
Manual, Technical	43440	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 90	37401
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

8.0 BTDA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	43953	Panel, Genset Control	36539
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	44336
Belt, STD Alternator	45232	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	
Diode	35931	Pump, Mounting Gasket	
Dipstick		Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	34410	Pump, Sea Water	33636
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	36918	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Electric Lift		Pump, Fuel Lift	39275
Gasket, Head		Rectifier	43649
Gasket, Oil Pan		Remote Lube Oil Filter	
Gasket Set, Upper	46900	Silencer, Air Intake	
Gasket Set, Complete	46901	Solenoid, Fuel Shut Off	37100
Glowplug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	44347	Spare Parts Kit A	46420
Heat Exchanger	45528	Spare Parts Kit B	47157
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
Injector	37091	Stop Switch	24731
Injection Pump		Tank, Coolant Recovery	24977
Injection Hardware Kit	46419	Thermostat	32872
Injector Nozzle		Thermostat Mounting Gasket	38225
Injector Return Line	44500	Valve Cover Gasket	
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	44800	Water Temperature Sender	35109
Manual, Parts List	48220	Water Temperature Switch	39550
Manual, Service	43440	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 90	37401
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

10.0 BTD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Oil Pressure Sender	24132
Belt, Sea Water Pump	N/A	Panel, Genset Control	36539
Belt, STD Alternator	30475	Panel, Remote Stop/Start	36539
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	35931	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Electronic Voltage Regulator	34410	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	33636
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	30326
Filter, Lube Oil	36918	Pump, Impeller Kit	34440
Filter, Fuel Oil	30200	Pump, Repair Kit	34466
Filter, Electric Lift	30548	Pump, Seal	33043
Gasket, Head	37661	Pump, Fuel Lift	39275
Gasket, Oil Pan	30498	Rectifier	43649
Gasket Set, Upper	39730	Remote Lube Oil Filter	32149
Gasket Set, Complete	39731	Silencer, Air Intake	34744
Glowplug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	36903	Spare Parts Kit A	37649
Heat Exchanger End Cap	22850	Spare Parts Kit B	37650
Heat Exchanger Gasket	22851	Starter Motor	34552
Injector	30538	Starter Solenoid	36218
Injection Pump	37697	Stop Switch	24731
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30569	Thermostat Mounting Gasket	34196
Isolators, Front	24776	Valve Cover Gasket	30515
Isolators, Rear	24776	Voltmeter	37605
Manual, Operator	36746	Water Temperature Meter	37601
Manual, Parts List	36776	Water Temperature Sender	35109
Manual, Technical	43444	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Injected. Exhaust Elbow 90	37401
Engine, Block Assy.	44084	Zinc	11885

10.0 BTDA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	43953	Panel, Genset Control	36539
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	44336
Belt, STD Alternator	45232	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	
Diode	35931	Pump, Mounting Gasket	
Dipstick		Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	34410	Pump, Sea Water	33636
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	36918	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Electric Lift		Pump, Fuel Lift	39275
Gasket, Head		Rectifier	43649
Gasket, Oil Pan		Remote Lube Oil Filter	
Gasket Set, Upper	46900	Silencer, Air Intake	
Gasket Set, Complete	46901	Solenoid, Fuel Shut Off	37100
Glowplug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	44347	Spare Parts Kit A	46420
Heat Exchanger	45528	Spare Parts Kit B	47157
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
Injector	37091	Stop Switch	24731
Injection Pump		Tank, Coolant Recovery	24977
Injection Hardware Kit	46419	Thermostat	32872
Injector Nozzle		Thermostat Mounting Gasket	38225
Injector Return Line	44500	Valve Cover Gasket	
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	44800	Water Temperature Sender	35109
Manual, Parts List	48220	Water Temperature Switch	39550
Manual, Service	43440	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 90	37401
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

11.0 BTD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Genset Control	36539
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	36539
Belt, STD Alternator	30475	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	30591
Diode	35931	Pump, Mounting Gasket	30474
Dipstick	30587	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	34410	Pump, Sea Water	33636
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	35828	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	30507	Rectifier	43649
Gasket, Oil Pan	30499	Remote Lube Oil Filter	32149
Gasket Set, Upper	37693	Silencer, Air Intake	34744
Gasket Set, Complete	37694	Solenoid, Fuel Shut Off	23041
Glowplug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	37691
Heat Exchanger	36903	Spare Parts Kit B	37692
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
Injector	30538	Stop Switch	24731
Injection Pump	37697	Tank, Coolant Recovery	24977
Injection Hardware Kit	33093	Thermostat	24688
Injector Nozzle	30297	Thermostat Mounting Gasket	34196
Injector Return Line	34610	Valve Cover Gasket	30516
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	36746	Water Temperature Sender	35109
Manual, Parts List	36776	Water Temperature Switch	39550
Manual, Technical	43440	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 90	37401
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

11.0 WMD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Oil Pressure Sender	24132
Belt, Sea Water Pump	N/A	Panel, Genset Control	24873
Belt, STD Alternator	30592	Panel, Remote Stop/Start	24943
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	N/A	Pump, Fresh Water	30591
Dipstick	30587	Pump, Mounting Gasket	30474
Electronic Voltage Regulator	NA	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	37431
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	30326
Filter, Lube Oil	36918	Pump, Impeller Kit	34440
Filter, Fuel Oil	30200	Pump, Repair Kit	34466
Filter, Electric Lift	30548	Pump, Seal	33043
Gasket, Head	30507	Pump, Fuel Lift	39275
Gasket, Oil Pan	30499	Rectifier	43649
Gasket Set, Upper	30726	Remote Lube Oil Filter	32149
Gasket Set, Complete	30729	Silencer, Air Intake	34727
Glowplug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	24774	Spare Parts Kit A	24935
Heat Exchanger End Cap	31291	Spare Parts Kit B	34938
Heat Exchanger Gasket	31290	Starter Motor	30593
Injector	30538	Starter Solenoid	30245
Injection Pump	30549	Stop Switch	24731
Injection Hardware Kit	33093	Tank, Coolant Recovery	24977
Injector Nozzle	30297	Thermostat	24688
Injector Return Line	30569	Thermostat Mounting Gasket	24323
Isolators, Front	15238	Valve Cover Gasket	30516
Isolators, Rear	15238	Voltmeter	37605
Manual, Operator	32461	Water Temperature Meter	37601
Manual, Parts List	32139	Water Temperature Sender	35109
Manual, Technical	43440	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 45	33067
Oil Pressure Meter	37603	Zinc	11885

12.5 BTD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Genset Control	24873
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	24943
Belt, STD Alternator	30475	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	30473
Diode	35931	Pump, Mounting Gasket	30474
Dipstick	30467	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	30257	Pump, Sea Water	37431
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	35828	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	30405	Rectifier	43649
Gasket, Oil Pan	30413	Remote Lube Oil Filter	32149
Gasket Set, Upper	30728	Silencer, Air Intake	31208
Gasket Set, Complete	30729	Solenoid, Fuel Shut Off	23041
Glowplug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	24939
Heat Exchanger	24774	Spare Parts Kit B	24940
Heat Exchanger End Cap	31291	Starter Motor	30593
Heat Exchanger Gasket	31290	Starter Solenoid	30245
Injector	30538	Stop Switch	24731
Injection Pump	30447	Tank, Coolant Recovery	24977
Injection Hardware Kit	33093	Thermostat	24688
Injector Nozzle	30297	Thermostat Mounting Gasket	24323
Injector Return Line	34610	Valve Cover Gasket	30497
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	35108
Manual, Operator	32461	Water Temperature Sender	35109
Manual, Parts List	32139	Water Temperature Switch	39550
Manual, Technical	43440	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 90	37401
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

12.5 BTDA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Genset Control	36539
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	24943
Belt, STD Alternator	30475	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	30591
Diode	35931	Pump, Mounting Gasket	30474
Dipstick	30587	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	34410	Pump, Sea Water	33636
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	35828	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	37687	Rectifier	43649
Gasket, Oil Pan	30499	Remote Lube Oil Filter	32149
Gasket Set, Upper	37711	Silencer, Air Intake	34744
Gasket Set, Complete	37712	Solenoid, Fuel Shut Off	23041
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	37709
Heat Exchanger	36903	Spare Parts Kit B	37710
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
Injector	30538	Stop Switch	24731
Injection Pump	37697	Tank, Coolant Recovery	24977
Injection Hardware Kit	33093	Thermostat	24688
Injector Nozzle	30297	Thermostat Mounting Gasket	34196
Injector Return Line	30570	Valve Cover Gasket	30516
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	36746	Water Temperature Sender	35109
Manual, Parts List	36776	Water Temperature Switch	39550
Manual, Technical	43440	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 90	37401
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

12.5 BTDB Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	43953	Panel, Genset Control	36539
Starter	30593		
Belt, Sea Water Pump	None	Panel, Remote Stop/Start	44336
Belt, STD Alternator	45232	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	45231
		Pump, Mounting Gasket	30474
Dipstick	45230	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	34410	Pump, Sea Water	33636
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	36918	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Air Intake	39705	Pump, Fuel Lift	39275
Gasket, Head	45177	Rectifier	43649
Gasket, Oil Pan	None	Remote Lube Oil Filter	
Gasket Set, Upper	46902	Silencer, Air Intake	43823
Gasket Set, Complete	46903	Solenoid, Fuel Shut Off	37100
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	44347	Spare Parts Kit A	46420
Heat Exchanger	45528	Spare Parts Kit B	47158
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
O-Ring Exchanger End Cap	19321		
Injector	37091	Stop Switch	24731
Injection Pump	45265	Tank, Coolant Recovery	24977
Injection Hardware Kit	46419	Thermostat	32872
Injector Nozzle	36935	Thermostat Mounting Gasket	38225
Injector Return Line	44496	Transformer	37463
Isolators, Front	15238	Valve Cover Gasket	45187
Isolators, Rear	15238	Voltmeter	37605
Manual, Operator	44800	Water Temperature Meter	37601
Manual, Parts List	Not Yet	Water Temperature Sender	35109
Manual, Service	45100	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Injected. Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

12.5 WMD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Genset Control	24873
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	24943
Belt, STD Alternator	30475	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	30473
Diode	N/A	Pump, Mounting Gasket	30474
Dipstick	30467	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	N/A	Pump, Sea Water	N/A
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	35828	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	30405	Rectifier	43649
Gasket, Oil Pan	30413	Remote Lube Oil Filter	32149
Gasket Set, Upper	30728	Silencer, Air Intake	34727
Gasket Set, Complete	30729	Solenoid, Fuel Shut Off	23041
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	24938
Heat Exchanger	24774	Spare Parts Kit B	24940
Heat Exchanger End Cap	31291	Starter Motor	30593
Heat Exchanger Gasket	31290	Starter Solenoid	30245
Injector	30538	Stop Switch	24731
Injection Pump	30549	Tank, Coolant Recovery	24977
Injection Hardware Kit	33093	Thermostat	24688
Injector Nozzle	30297	Thermostat Mounting Gasket	24323
Injector Return Line	30569	Valve Cover Gasket	30497
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	32461	Water Temperature Sender	35109
Manual, Parts List	32139	Water Temperature Switch	39550
Manual, Technical	43440	Water Injected. Exhaust Elbow 45	33067
Oil Pressure Switch	37323	Water Injected. Exhaust Elbow 90	N/A
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

15.0 BTD Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	30594	Panel, Genset Control	24873
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	24943
Belt, STD Alternator	30475	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	34370
Diode	35931	Pump, Mounting Gasket	34371
Dipstick	Call WB	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	30257	Pump, Sea Water	16423
Emergency Stop Switch	33259	Pump, Mounting Gasket	11143
Exhaust Temperature Switch	32923	Pump, Impeller Kit	33104
Filter, Lube Oil	35828	Pump, Repair Kit	18172
Filter, Fuel Oil	24363	Pump, Seal	24831
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	34283	Rectifier	43649
Gasket, Oil Pan	Call WB	Remote Lube Oil Filter	32149
Gasket Set, Upper	34443	Silencer, Air Intake	34021
Gasket Set, Complete	34442	Solenoid, Fuel Shut Off	23041
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	33444
Heat Exchanger	36898	Spare Parts Kit B	34445
Heat Exchanger End Cap	31291	Starter Motor	30593
Heat Exchanger Gasket	31290	Starter Solenoid	30245
Injector	34376	Stop Switch	24731
Injection Pump	37760	Tank, Coolant Recovery	24977
Injection Hardware Kit	34441	Thermostat	24688
Injector Nozzle	34377	Thermostat Mounting Gasket	33966
Injector Return Line	34857	Valve Cover Gasket	34296
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	35108
Manual, Operator	36856	Water Temperature Sender	35109
Manual, Parts List	34908	Water Temperature Switch	39550
Manual, Technical	34907	Water Injected Exhaust Elbow 45	33067
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	N/A
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

15.0 BTDA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Genset Control	36539
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	24943
Belt, STD Alternator	11672	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32213
Diode	35931	Pump, Mounting Gasket	31036
Dipstick	30991	Pump, Rebuild Kit	31054
Electronic Voltage Regulator	34410	Pump, Sea Water	16423
Emergency Stop Switch	33259	Pump, Mounting Gasket	11143
Exhaust Temperature Switch	32923	Pump, Impeller Kit	33104
Filter, Lube Oil	35828	Pump, Repair Kit	18172
Filter, Fuel Oil	24363	Pump, Seal	18159
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	30987	Rectifier	43649
Gasket, Oil Pan	31051	Remote Lube Oil Filter	32149
Gasket Set, Upper	38773	Silencer, Air Intake	37786
Gasket Set, Complete	38774	Solenoid, Fuel Shut Off	24338
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	38775
Heat Exchanger	38300	Spare Parts Kit B	38776
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
Injector	32743	Stop Switch	24731
Injection Pump	36193	Tank, Coolant Recovery	24977
Injection Hardware Kit	32050	Thermostat	24690
Injector Nozzle	32477	Thermostat Mounting Gasket	33373
Injector Return Line	31020	Valve Cover Gasket	30516
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	38663	Water Temperature Sender	35109
Manual, Parts List	38824	Water Temperature Switch	39550
Manual, Technical	32460	Water Injected Exhaust Elbow 45	
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

15.0 BTDB Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Genset Control	36539
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	42448
Belt, STD Alternator	11672	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32213
Diode	35931	Pump, Mounting Gasket	31036
Dipstick	40940	Pump, Rebuild Kit	31054
Electronic Voltage Regulator	34410	Pump, Sea Water	16423
Emergency Stop Switch	33259	Pump, Mounting Gasket	11143
Exhaust Temperature Switch	32923	Pump, Impeller Kit	33104
Filter, Lube Oil	35828	Pump, Repair Kit	18172
Filter, Fuel Oil	24363	Pump, Seal	18159
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	43180	Rectifier	43649
Gasket, Oil Pan	43213	Remote Lube Oil Filter	32149
Gasket Set, Upper	41787	Silencer, Air Intake	37786
Gasket Set, Complete	41788	Solenoid, Fuel Shut Off	24338
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	38775
Heat Exchanger	38300	Spare Parts Kit B	41786
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
Injector	43211	Stop Switch	24731
Injection Pump	43183	Tank, Coolant Recovery	24977
Injection Hardware Kit	32050	Thermostat	24690
Injector Nozzle	43212	Thermostat Mounting Gasket	33373
Injector Return Line	31020	Valve Cover Gasket	30516
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	38663	Water Temperature Sender	35109
Manual, Parts List	38824	Water Temperature Switch	39550
Manual, Technical	32460	Water Injected Exhaust Elbow 45	
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

15.0 BTDC Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	43953	Panel, Genset Control	36539
Starter	30593		
Belt, Sea Water Pump	None	Panel, Remote Stop/Start	44336
Belt, STD Alternator	45232	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	45231
		Pump, Mounting Gasket	30474
Dipstick	45230	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	34410	Pump, Sea Water	33636
Emergency Stop Switch	33259	Pump, Mounting Gasket	30326
Exhaust Temperature Switch	32923	Pump, Impeller Kit	34440
Filter, Lube Oil	36918	Pump, Repair Kit	34466
Filter, Fuel Oil	30200	Pump, Seal	33043
Filter, Air Intake	39705	Pump, Fuel Lift	39275
Gasket, Head	45177	Rectifier	43649
Gasket, Oil Pan	None	Remote Lube Oil Filter	
Gasket Set, Upper	46902	Silencer, Air Intake	43823
Gasket Set, Complete	46903	Solenoid, Fuel Shut Off	37100
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	44347	Spare Parts Kit A	46420
Heat Exchanger	45528	Spare Parts Kit B	47158
Heat Exchanger End Cap	22850	Starter Motor	30593
Heat Exchanger Gasket	22851	Starter Solenoid	30245
O-Ring Exchanger End Cap	19321		
Injector	37091	Stop Switch	24731
Injection Pump	45265	Tank, Coolant Recovery	24977
Injection Hardware Kit	46419	Thermostat	32872
Injector Nozzle	36935	Thermostat Mounting Gasket	38225
Injector Return Line	44496	Transformer	37463
Isolators, Front	15238	Valve Cover Gasket	45187
Isolators, Rear	15238	Voltmeter	37605
Manual, Operator	44800	Water Temperature Meter	37601
Manual, Parts List	47631	Water Temperature Sender	35109
Manual, Service	45100	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 45	37402
Oil Pressure Meter	37603	Water Injected Exhaust Elbow 90	37401
Oil Pressure Sender	24132	Zinc	11885

15.0 WTA - WMF Diesel Generators Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Genset Control	33348
Belt, Sea Water Pump	N/A	Panel, Remote Stop/Start	24943
Belt, STD Alternator	16001	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32213
Diode	43649	Pump, Mounting Gasket	31035
Dipstick	30991	Pump, Rebuild Kit	31054
Electronic Voltage Regulator	N/A	Pump, Sea Water	16423
Emergency Stop Switch	33259	Pump, Mounting Gasket	11143
Exhaust Temperature Switch	32923	Pump, Impeller Kit	33104
Filter, Lube Oil	16655	Pump, Repair Kit	18172
Filter, Fuel Oil	24363	Pump, Seal	18159
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	30897	Rectifier	43649
Gasket, Oil Pan	31051	Remote Lube Oil Filter	21513
Gasket Set, Upper	32051	Silencer, Air Intake	37786
Gasket Set, Complete	32082	Solenoid, Fuel Shut Off	23041
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	32058
Heat Exchanger	36905	Spare Parts Kit B	32053
Heat Exchanger End Cap	31291	Starter Motor	23953
Heat Exchanger Gasket	31290	Starter Solenoid	23338
Injector	32743	Stop Switch	24731
Injection Pump	32509	Tank, Coolant Recovery	24977
Injection Hardware Kit	32050	Thermostat	24690
Injector Nozzle	32744	Thermostat Mounting Gasket	33373
Injector Return Line	34857	Valve Cover Gasket	30984
Isolators, Front	32013	Voltmeter	23090
Isolators, Rear	32013	Water Temperature Meter	37601
Manual, Operator	33533	Water Temperature Sender	35109
Manual, Parts List	32416	Water Temperature Switch	39550
Manual, Technical	32460	Water Injected Exhaust Elbow 45	33067
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	N/A
Oil Pressure Meter	24133	Zinc	11885
Oil Pressure Sender	24132		

20.0 BED Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Genset Control	36539
Belt, Sea Water Pump	31152	Panel, Remote Stop/Start	24943
Belt, STD Alternator	39181	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32711
Diode	39666	Pump, Mounting Gasket	32712
Dipstick	32646	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	39640	Pump, Sea Water	38445
Emergency Stop Switch	33259	Pump, Mounting Gasket	N/A
Exhaust Temperature Switch	32923	Pump, Impeller Kit	11907
Filter, Lube Oil	40154	Pump, Repair Kit	33329
Filter, Fuel Oil	24363	Pump, Seal	14774
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	32641	Rectifier	N/A
Gasket, Oil Pan	32716	Remote Lube Oil Filter	32973
Gasket Set, Upper	39675	Silencer, Air Intake	37450
Gasket Set, Complete	39676	Solenoid, Fuel Shut Off	41372
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	39326
Heat Exchanger	38300	Spare Parts Kit B	39327
Heat Exchanger End Cap	22850	Starter Motor	38384
Heat Exchanger Gasket	22851	Starter Solenoid	39523
Injector	32743	Stop Switch	24731
Injection Pump	32748	Tank, Coolant Recovery	24977
Injection Hardware Kit	33094	Thermostat	24690
Injector Nozzle	32744	Thermostat Mounting Gasket	33373
Injector Return Line	32745	Valve Cover Gasket	32639
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15238	Water Temperature Meter	37601
Manual, Operator	39685	Water Temperature Sender	35109
Manual, Parts List	40000	Water Temperature Switch	39550
Manual, Technical	40485	Water Injected Exhaust Elbow 45	38760
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

20.0 BEDA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Genset Control	36539
Belt, Sea Water Pump	31152	Panel, Remote Stop/Start	24943
Belt, STD Alternator	39181	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32711
Diode	39666	Pump, Mounting Gasket	41367
Dipstick	41351	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	39640	Pump, Sea Water	38445
Emergency Stop Switch	33259	Pump, Mounting Gasket	N/A
Exhaust Temperature Switch	32923	Pump, Impeller Kit	11907
Filter, Lube Oil	40154	Pump, Repair Kit	33329
Filter, Fuel Oil	24363	Pump, Seal	14774
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	41348	Rectifier	N/A
Gasket, Oil Pan	32716	Remote Lube Oil Filter	32973
Gasket Set, Upper	41392	Silencer, Air Intake	37783
Gasket Set, Complete	41393	Solenoid, Fuel Shut Off	41372
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	41396
Heat Exchanger	38300	Spare Parts Kit B	41397
Heat Exchanger End Cap	22850	Starter Motor	38384
Heat Exchanger Gasket	22851	Starter Solenoid	39523
Injector	41367	Stop Switch	24731
Injection Pump	41370	Tank, Coolant Recovery	24977
Injection Hardware Kit	41394	Thermostat	24960
Injector Nozzle	41368	Thermostat Mounting Gasket	33373
Injector Return Line	32745	Valve Cover Gasket	32639
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15239	Water Temperature Meter	37601
Manual, Operator	39685	Water Temperature Sender	35109
Manual, Parts List	42000	Water Temperature Switch	39550
Manual, Technical	43317	Water Injected Exhaust Elbow 45	38760
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

20.0 WTA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Oil Pressure Sender	33348
Belt, Sea Water Pump	31152	Panel, Genset Control	24873
Belt, STD Alternator	11672	Panel, Remote Stop/Start	24943
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	43649	Pump, Fresh Water	24557
Dipstick	24608	Pump, Mounting Gasket	24473
Electronic Voltage Regulator	30257	Pump, Rebuild Kit	24538
Emergency Stop Switch	33259	Pump, Sea Water	24102
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	N/A
Filter, Lube Oil	16655	Pump, Impeller Kit	33112
Filter, Fuel Oil	24363	Pump, Repair Kit	24652
Filter, Electric Lift	30548	Pump, Seal	24649
Gasket, Head	24344	Pump, Fuel Lift	39275
Gasket, Oil Pan	24156	Rectifier	43649
Gasket Set, Upper	24575	Remote Lube Oil Filter	21513
Gasket Set, Complete	24576	Silencer, Air Intake	31321
Glow plug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	36889	Spare Parts Kit A	24572
Heat Exchanger End Cap	22850	Spare Parts Kit B	24573
Heat Exchanger Gasket	22851	Starter Motor	23953
Injector	24562	Starter Solenoid	23338
Injection Pump	31286	Stop Switch	24731
Injection Hardware Kit	24574	Tank, Coolant Recovery	24977
Injector Nozzle	24565	Thermostat	24690
Injector Return Line	20950	Thermostat Mounting Gasket	33373
Isolators, Front	21529	Valve Cover Gasket	24343
Isolators, Rear	21529	Voltmeter	23090
Manual, Operator	33533	Water Temperature Meter	37601
Manual, Parts List	32416	Water Temperature Sender	35109
Manual, Technical	32460	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 45	33067
Oil Pressure Meter	24133	Zinc	11885

25.0 BED Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	39790	Panel, Genset Control	36539
Belt, Sea Water Pump	31152	Panel, Remote Stop/Start	24943
Belt, STD Alternator	39181	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32711
Diode	39666	Pump, Mounting Gasket	32712
Dipstick	32646	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	39640	Pump, Sea Water	38445
Emergency Stop Switch	33259	Pump, Mounting Gasket	N/A
Exhaust Temperature Switch	32923	Pump, Impeller Kit	11907
Filter, Lube Oil	40154	Pump, Repair Kit	33329
Filter, Fuel Oil	24363	Pump, Seal	14774
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	32641	Rectifier	N/A
Gasket, Oil Pan	32716	Remote Lube Oil Filter	32973
Gasket Set, Upper	39675	Silencer, Air Intake	37450
Gasket Set, Complete	39676	Solenoid, Fuel Shut Off	24338
Glow plug	24353	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	39326
Heat Exchanger	38300	Spare Parts Kit B	39327
Heat Exchanger End Cap	22850	Starter Motor	38384
Heat Exchanger Gasket	22851	Starter Solenoid	39523
Injector	32743	Stop Switch	24731
Injection Pump	32748	Tank, Coolant Recovery	24977
Injection Hardware Kit	33094	Thermostat	24960
Injector Nozzle	32744	Thermostat Mounting Gasket	33373
Injector Return Line	32745	Valve Cover Gasket	32639
Isolators, Front	15238	Voltmeter	37605
Isolators, Rear	15239	Water Temperature Meter	37601
Manual, Operator	39685	Water Temperature Sender	35109
Manual, Parts List	40000	Water Temperature Switch	39550
Manual, Technical	40485	Water Injected Exhaust Elbow 45	38760
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

25.0 WTA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Oil Pressure Sender	33348
Belt, Sea Water Pump	16446	Panel, Genset Control	24873
Belt, STD Alternator	32977	Panel, Remote Stop/Start	24943
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	43649	Pump, Fresh Water	32711
Dipstick	32646	Pump, Mounting Gasket	32712
Electronic Voltage Regulator	30257	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	13353
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	N/A
Filter, Lube Oil	40154	Pump, Impeller Kit	11907
Filter, Fuel Oil	24363	Pump, Repair Kit	33329
Filter, Electric Lift	30548	Pump, Seal	14774
Gasket, Head	32716	Pump, Fuel Lift	39275
Gasket, Oil Pan	32716	Rectifier	43649
Gasket Set, Upper	32555	Remote Lube Oil Filter	32973
Gasket Set, Complete	32556	Silencer, Air Intake	37450
Glow plug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	36889	Spare Parts Kit A	32557
Heat Exchanger End Cap	22850	Spare Parts Kit B	32558
Heat Exchanger Gasket	22851	Starter Motor	23953
Injector	32743	Starter Solenoid	23338
Injection Pump	32729	Stop Switch	24731
Injection Hardware Kit	33094	Tank, Coolant Recovery	24977
Injector Nozzle	32744	Thermostat	24690
Injector Return Line	20950	Thermostat Mounting Gasket	33373
Isolators, Front	15239	Valve Cover Gasket	24343
Isolators, Rear	15239	Voltmeter	23090
Manual, Operator	33533	Water Temperature Meter	37601
Manual, Parts List	33620	Water Temperature Sender	35109
Manual, Technical	33355	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 45	33067
Oil Pressure Meter	24133	Zinc	11885

32.0 BED Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Genset Control	36539
Belt, Sea Water Pump	13810	Panel, Remote Stop/Start	24943
Belt, STD Alternator	32544	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32711
Diode	39666	Pump, Mounting Gasket	40363
Dipstick	32759	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	39640	Pump, Sea Water	38445
Emergency Stop Switch	33259	Pump, Mounting Gasket	N/A
Exhaust Temperature Switch	32923	Pump, Impeller Kit	11907
Filter, Lube Oil	40154	Pump, Repair Kit	33329
Filter, Fuel Oil	24363	Pump, Seal	14774
Filter, Electric Lift	30548	Pump, Fuel Lift	39475
Gasket, Head	32818	Rectifier	N/A
Gasket, Oil Pan	32790	Remote Lube Oil Filter	32973
Gasket Set, Upper		Silencer, Air Intake	37782
Glow plug	24353	Solenoid, Fuel Shut Off	24338
Heater, Air Intake	40368	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	39945
Heat Exchanger	39230	Spare Parts Kit B	40405
Heat Exchanger End Cap	22850	Starter Motor	38384
Heat Exchanger Gasket	22851	Starter Solenoid	39523
Injector	24563	Stop Switch	24731
Injection Pump	32894	Tank, Coolant Recovery	24977
Injection Hardware Kit	33095	Thermostat	32872
Injector Nozzle	24565	Thermostat Mounting Gasket	38225
Injector Return Line		Valve Cover Gasket	32755
Isolators, Front		Voltmeter	37605
Isolators, Rear		Water Temperature Meter	37601
Manual, Operator	39837	Water Temperature Sender	35109
Manual, Parts List		Water Temperature Switch	39550
Manual, Technical		Water Injected Exhaust Elbow 45	38760
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

32.0 BEDA Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Genset Control	36539
Belt, Sea Water Pump	13810	Panel, Remote Stop/Start	24943
Belt, STD Alternator	32544	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	40362
Diode	39666	Pump, Mounting Gasket	40363
Dipstick	32759	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	39640	Pump, Sea Water	38445
Emergency Stop Switch	33259	Pump, Mounting Gasket	N/A
Exhaust Temperature Switch	32923	Pump, Impeller Kit	11907
Filter, Lube Oil	40154	Pump, Repair Kit	33329
Filter, Fuel Oil	14776	Pump, Seal	14774
Filter, Electric Lift	30548	Pump, Fuel Lift	41443
Gasket, Head	32818	Rectifier	N/A
Gasket, Oil Pan	32790	Remote Lube Oil Filter	32973
Gasket Set, Upper		Silencer, Air Intake	37782
Gasket Set, Complete		Solenoid, Fuel Shut Off	24338
Heater, Air Intake	40368	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	40387
Heat Exchanger	39230	Spare Parts Kit B	40388
Heat Exchanger End Cap	22850	Starter Motor	38384
Heat Exchanger Gasket	22851	Starter Solenoid	39523
Injector	24563	Stop Switch	24731
Injection Pump	32894	Tank, Coolant Recovery	24977
Injection Hardware Kit	33095	Thermostat	32872
Injector Nozzle	24565	Thermostat Mounting Gasket	38225
Injector Return Line		Valve Cover Gasket	32755
Isolators, Front	301136	Voltmeter	37605
Isolators, Rear	15239	Water Temperature Meter	37601
Manual, Operator	39837	Water Temperature Sender	35109
Manual, Parts List		Water Temperature Switch	39550
Manual, Technical		Water Injected Exhaust Elbow 45	38760
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

32.0 BEDB Diesel Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Genset Control	36539
Belt, Sea Water Pump	13810	Panel, Remote Stop/Start	24943
Belt, STD Alternator	32544	Preheat & Start Switch	24732
Circuit Breaker	24683	Pump, Fresh Water	32711
Diode	39666	Pump, Mounting Gasket	32712
Dipstick	32759	Pump, Rebuild Kit	N/A
Electronic Voltage Regulator	39640	Pump, Sea Water	38445
Emergency Stop Switch	33259	Pump, Mounting Gasket	N/A
Exhaust Temperature Switch	32923	Pump, Impeller Kit	11907
Filter, Lube Oil	40154	Pump, Repair Kit	33329
Filter, Fuel Oil	24363	Pump, Seal	14774
Filter, Electric Lift	30548	Pump, Fuel Lift	39275
Gasket, Head	32818	Rectifier	N/A
Gasket, Oil Pan	32790	Remote Lube Oil Filter	32973
Gasket Set, Upper		Silencer, Air Intake	37782
Glow plug	24353	Solenoid, Fuel Shut Off	24338
Heater, Air Intake	40368	Solenoid, Preheat	24639
Harness 15 FT. EXT 8 Pin	30760	Spare Parts Kit A	39945
Heat Exchanger	39230	Spare Parts Kit B	40741
Heat Exchanger End Cap	22850	Starter Motor	38384
Heat Exchanger Gasket	22851	Starter Solenoid	39523
Injector	24563	Stop Switch	24731
Injection Pump	32894	Tank, Coolant Recovery	24977
Injection Hardware Kit	33095	Thermostat	32872
Injector Nozzle	24565	Thermostat Mounting Gasket	38225
Injector Return Line		Valve Cover Gasket	32755
Isolators, Front		Voltmeter	37605
Isolators, Rear		Water Temperature Meter	37601
Manual, Operator	39837	Water Temperature Sender	35109
Manual, Parts List		Water Temperature Switch	39550
Manual, Technical		Water Injected Exhaust Elbow 45	38760
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 90	
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		

32.0 WTA - WMF Diesel Generators Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Oil Pressure Sender	33348
Belt, Sea Water Pump	11400	Panel, Genset Control	24873
Belt, STD Alternator	32544	Panel, Remote Stop/Start	24943
Circuit Breaker	24683	Preheat & Start Switch	24732
Diode	43649	Pump, Fresh Water	32895
Dipstick	32759	Pump, Mounting Gasket	32855
Electronic Voltage Regulator	30257	Pump, Rebuild Kit	N/A
Emergency Stop Switch	33259	Pump, Sea Water	13353
Exhaust Temperature Switch	32923	Pump, Mounting Gasket	N/A
Filter, Lube Oil	32874	Pump, Impeller Kit	11907
Filter, Fuel Oil	24363	Pump, Repair Kit	33329
Filter, Electric Lift	30548	Pump, Seal	14774
Gasket, Head	32818	Pump, Fuel Lift	39275
Gasket, Oil Pan	32790	Rectifier	43649
Gasket Set, Upper	32559	Remote Lube Oil Filter	32973
Gasket Set, Complete	32560	Silencer, Air Intake	32164
Glow plug	24353	Solenoid, Fuel Shut Off	23041
Harness 15 FT. EXT 8 Pin	30760	Solenoid, Preheat	24639
Heat Exchanger	36890	Spare Parts Kit A	32561
Heat Exchanger End Cap	33299	Spare Parts Kit B	32562
Heat Exchanger Gasket	33000	Starter Motor	31226
Injector	24563	Starter Solenoid	23338
Injection Pump	32808	Stop Switch	24731
Injection Hardware Kit	33095	Tank, Coolant Recovery	24977
Injector Nozzle	24565	Thermostat	32872
Injector Return Line	20950	Thermostat Mounting Gasket	32153
Isolators, Front	15239	Valve Cover Gasket	32755
Isolators, Rear	15239	Voltmeter	23090
Manual, Operator	33533	Water Temperature Meter	37601
Manual, Parts List	33620	Water Temperature Sender	35109
Manual, Technical	33355	Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow 45	33531
Oil Pressure Meter	24133	Zinc	11885

Century Series Diesel Generators Fast Moving Parts List

Description	4 Cyl	6 Cyl	Description	4 Cyl	6 Cyl
Alternator, 12V 50A-24V 42A	39139		Oil Pressure Sender 12V	24132	
Alternator, 24V 42A	38530		Oil Pressure Sender 24V	42161	
Belt, Guard	44044		Panel Kit, Admiral 12V	36842	
Belt, Water Pump - Alternator	44385		Panel Kit, Admiral 24V	46637	
Circuit Breaker 20A 12VDC	24683		Panel, Genset Control 12V	36539	
Circuit Breaker 10A 24VDC	20946		Panel, Genset Control 24V	42162	
Dipstick	43577		Panel, Remote Start/Stop 15 Pin	44336	
Emergency Stop Switch	33259		Pump, Fresh Water		
Exhaust Temperature Switch	32923		Pump, Mounting Gasket		
Filter, Air	43930		Pump, Rebuild Kit		
Filter, Fuel Oil	46140	46146	Pump, Sea Water	43514	
Filter, Lube Oil	44995	44998	Pump, Mounting O-Ring	44183	
Fuse 8 AMP	33769		Pump, Impeller Kit		
Gasket, Head			Pump, Repair Kit		
Gasket, Oil Pan	45444	45445	Remote Lube Oil Filter	44995	44998
Gasket Set, Upper			Solenoid, Fuel Control 12V	303007	
Gasket Set, Complete			Solenoid, Fuel Control 24V	39746	
Glow plug	45124		Solenoid, Fuel Stop 12V	45561	
Harness Ext 15 Pin 15'-30'	44347	44799	Solenoid, Fuel Stop 24V	45562	
Harness 15 FT. EXT 8 Pin	30760		Solenoid, Preheat 12V	24639	
Harness 15 FT. EXT 4 Pin	36557		Solenoid, Preheat 24V	22249	
Heat Exchanger	44791	44792	Spare Parts Kit A		
Heat Exchanger O-Ring	44131		Spare Parts Kit B		
Heat Exchanger End Cap	42053		Starter Motor 12V-24V	43472	39417
Heat Exchanger Gasket	42054		Switch, Preheat & Start	24732	
Hourmeter	36192	42159	Switch, Stop	24731	
Injector			Tachometer, Admiral Panel	39826	
Injection Pump			Tank, Coolant Recovery	24977	
Injection Hardware Kit			Thermostat	45486	
Injector Nozzle			Thermostat Mounting Gasket	42042	
Injector Return Line			Valve Cover Gasket		
Isolator, Front	40513	40513	Voltage Regulator		
Isolators, Rear	40512	40513	Voltmeter	35111	42156
Manual, Operator	45139		Water Temperature Meter 12V-24V	35108	
Manual, Technical			Water Temperature Meter 12V-24V	42158	
Oil Cooler	36650		Water Temperature Switch	39550	
Oil Pressure Switch #5	37323		Water Injected Exhaust Elbow Turbo	44493	
Oil Pressure Switch #10	11552		Water Injected Exhaust Elbow Nat. Asp.	44495	
Oil Pressure Meter 12V	35110		Wiring Harness	44782	
Oil Pressure Meter 24V	42157		Zinc	11885	