

### 3.0 MVP Gasoline Generator Fast Moving Parts List

Air Filter/Flame Arrestor	43438	Magnetic Pickup	48057
Actuator. Speed Control	48490	Manual. Operator	48009
Belt. Water Pump	46869	Manual. Parts List	48010
Belt. Generator Drive	46851	Manual. Service	
Belt. Timing	48154	Oil Pressure Switch	37323
Carburetor	48348	Panel. Remote Start/Stop	48056
Dipstick (Service Side)	41828	Pump. Fuel	46364
Dipstick	45356	Pump. Sea Water	46814
Exhaust Temp Switch	32923	Pump. Impeller Kit (Sea Water)	48065
Filter. Fuel - Kit	47006	Pump. Repair Kit (Sea Water)	48066
Filter. Lube Oil	48078	Spare Parts Kit A	48082
Fuse.10 Amp	48072	Spare Parts Kit B	48083
Fuse. 20 Amp	48087	Sparkplug (2)	45352
Gasket Set. Complete	48081	Spring. Belt Tensioner	47834
Gasket Set. Upper	N/A	Starter Motor	48152
Gasket. Head	48153	Starter Solenoid	48155
Gasket. Oil Sump Plate	47992	Switch. Start / Stop	47202
Gasket. Oil Pan	47821	Thermostat	48157
Hourmeter	42388	Thermostat Mounting Gasket	48150
Ignition Coil	45350	Voltage Regulator,	48158
Ignition Control Module	48351	Water Injected Exhaust	48070
Isolator	46272	Zinc, Anode W/Gasket	48071

## 4.0 BTG Gasoline Generators Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Alternator	N/A	Panel, Control	35201
Armature	35982	Panel, Remote Instrument	36055
Battery Charger	35981	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	35299	Points	35740
Belt, STD Alternator	N/A	Pump, Fresh Water	35600
Belt, FWP to Governor	N/A	Pump, Mounting Gasket	35601
Belt Guard	NLA	Pump, Rebuild Kit	N/A
Cap, Distributor	35607	Pump, Sea Water	32617
Capacitor	35985	Pump Mounting Gasket	N/A
Carburetor	35341	Pump, Impeller Kit	32620
Carburetor Rebuild Kit	N/A	Pump, Repair Kit	N/A
Diode	35971	Pump, Seal	N/A
Distributor	35447	Pump, Fuel Lift	33630
Distributor Igniter	N/A	Rectifier	43649
Drip Tray	36376	Remote Lube Oil Filter	N/A
Exhaust Manifold	37316	Resistor, Ballast	35665
Exhaust Temp. Switch	32923	Rotor, Distributor	35610
Filter, Lube Oil	35595	Spare Parts Kit A	35690
Filter, Fuel oil	N/A	Spare Parts Kit B	35691
Filter, Electric Lift	35920	Sparkplug	35666
Gas denser	N/A	Starter	34552
Gasket Set, Upper	35688	Starter Solenoid	36218
Gasket Set, Complete	35689	Stator Incl. Housing	41218
Generator Assembly	NLA	Stop Switch	33631
Governor	34821	Thermostat	35736
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	34196
Heat Exchanger	36893	Transformer	N/A
Heat Exchanger End Cap	33297	Valve PCV	N/A
Heat Exchanger Gasket	33298	Valve Cover Gasket	35478
Hour Meter	12892	Voltage Regulator	N/A
Ignition Coil	35667	Voltmeter	37605
Isolators	24776	Water Temp Meter	37601
Manuals, Operators	35729	Water Temp Sender	35109
Manuals, Parts	36194	Water Temp Switch	39550
Manuals, Technical	36209	Water Injected Elbow	34486
Module, Pickup	35620	Wire Set	35668
Oil Pressure Switch	37323	Zinc	11885
Overspeed Switch	41225		

## 4.5 BCG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Alternator	N/A	Panel, Control	37995
Armature	35982	Panel, Remote Instrument.	36055
Battery Charger	35981	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	N/A	Points	37929
Belt, STD Alternator	N/A	Pump, Fresh Water	37919
Belt, FWP to Governor	37830	Pump, Mounting Gasket	37921
Belt Guard	37618	Pump, Rebuild Kit	N/A
Cap, Distributor	37925	Pump, Sea Water	32617
Capacitor	35978	Pump Mounting Gasket	N/A
Carburetor	42067	Pump, Impeller Kit	32620
Carburetor Rebuild Kit	N/A	Pump, Repair Kit	38100
Diode	35971	Pump, Seal	N/A
Distributor	37924	Pump, Fuel Lift	39273
Distributor Igniter	N/A	Rectifier	43649
Drip Tray	36377	Remote Lube Oil Filter	40078
Exhaust Manifold	37320	Resistor ballast	N/A
Exhaust Temperature Switch	32923	Rotor, Distributor	37926
Filter, Lube Oil	36918	Spare Parts Kit A	37980
Filter, Fuel oil	N/A	Spare Parts Kit B	37981
Filter, Electric Lift	N/A	Sparkplug	33805
Gas denser	38201	Starter	34552
Gasket Set, Upper	37978	Starter Solenoid	36218
Gasket Set, Complete	37979	Stator Incl. Housing	35983
Generator Assembly	37429	Stop Switch	33631
Governor	33560	Thermostat	37387
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	37922
Heat Exchanger	37562	Transformer	N/A
Heat Exchanger End Cap	33297	Valve PCV	N/A
Heat Exchanger Gasket	33298	Valve Cover Gasket	37866
Hour Meter	36192	Voltage Regulator	N/A
Ignition Coil	37968	Voltmeter	37605
Isolators	24776	Water Temp Meter	37601
Manuals, Operators	37491	Water Temp Sender	35109
Manuals, Parts	37984	Water Temp Switch	39550
Manuals, Technical	38747	Water Injected Elbow	37402
Module, Pickup	N/A	Wire Set	37934
Oil Pressure Switch	37323	Zinc	11885
Overspeed Switch	41183		

## 4.5 BCGB Gasoline Generators Fast Moving Parts List

Description	Part#	Description	Part#
Battery Charger	43096	Oil Pressure Sender	N/A
Belt, Sea Water Pump	42790	Oil Temperature Switch	43242
Belt, Governor	42798	Overspeed Shutdown	43836
Belt, Timing	43036	Panel, Genset Control	43834
Belt Guard	44188	Panel, Remote Instrument	N/A
Capacitor	35978	Panel, Remote Start/Stop	43912
Carburetor	43788	Pump, Fresh Water	43809
Carburetor Rebuild Kit		Pump Mounting Gasket	N/A
Circuit Breaker 20Am 12VDC	24683	Pump, Rebuild Kit	43809
Diode	35971	Pump, Sea Water	43275
Dipstick	42273	Pump Mounting Gasket	N/A
Distributor	42488	Pump, Impeller Kit	32620
Distributor Cap	43059	Pump, Repair Kit	40455
Distributor Igniter	43053	Pump, Fuel Lift	39273
Distributor Rotor	43050	Rectifier	43649
Exhaust Temperature Switch	32923	Remote Lube Oil Filter	40078
Filter, Lube Oil	36918	Resistor, Ballast	N/A
Filter, Fuel	N/A	Solenoid, Carburetor Choke	38038
Fuse 8 amp	33769	Spare Parts Kit A	42941
Fuse 30 amp	43634	Spare Parts Kit B	
Gas denser	43125	Sparkplug	43071
Gasket, Head	43029	Starter Motor	34552
Gasket, Oil Pan	42110	Starter Solenoid	32618
Gasket Set, Upper		Switch, On	33632
Gasket Set, Complete		Switch, Start/Stop	42521
Governor	43793	Tank, Coolant Recovery	24977
Heat Exchanger	43282	Thermostat	39378
Heat Exchanger End Ca	22850	Thermostat Mounting Gasket	42260
Heat Exchanger Gasket	22851	Valve Cover Gasket	42688
Hourmeter	42388	Voltmeter	N/A
Ignition Coil	42520	Water Temperature Meter	N/A
Isolators, Front	42810	Water Temperature Sender	N/A
Isolators, Rear	42810	Water Temperature Switch	39550
Manual, Operator		Water Injected Exhaust Elbow	
Manual, Parts list		Wire Set, Sparkplug &Coil	43060
Manual, Technical	44898	Zinc	11885
Oil Pressure Switch	37323		
Oil Pressure Meter	N/A		

## 4.5 BCGTC Gasoline Generator Fast Moving Parts List

Description	Part#	Description	Part#
Battery Charger	43096	Oil Pressure Switch	37323
Belt, Sea Water Pump	42790	Oil Pressure Meter	N/A
Belt, Governor	42798	Oil Pressure Sender	N/A
Belt, Timing	43036	Oil Temperature Switch	43242
Belt Guard	42694	Overspeed Shutdown	43240
Capacitor 4.5 BCGTC	35985	Panel, Genset Control	N/A
Capacitor 7.2 BCGTC	35978	Panel, Remote Instrument	N/A
Capacitor 9.6 BCGTC	41199	Panel, Remote Start/Stop	42826
Carburetor	42776	Pump, Fresh Water	43809
Carburetor Rebuild Kit	38100	Pump, Mounting Gasket	43005
Circuit Breaker 20Amp 12VDC	24683	Pump, Rebuild Kit	N/A
Diode		Pump, Sea Water	32617
Dipstick	42273	Pump, Mounting Gasket	N/A
Distributor	42488	Pump, Impeller Kit	32620
Distributor Cap	43059	Pump, Repair Kit	40455
Distributor Igniter	43053	Pump, Fuel Lift	39273
Distributor Rotor	43050	Rectifier	43649
Exhaust Temperature Switch	32923	Remote Lube Oil Filter	40078
Filter, Lube Oil	36918	Resistor, Ballast	N/A
Filter, Fuel	N/A	Solenoid, Carburetor w/jet	43800
Fuse 8 amp	33769	Spare Parts Kit A	42941
Fuse 30 amp	43634	Spare Parts Kit B	42942
Gas denser	43125	Sparkplug	43071
Gasket, Head	43029	Starter Motor	34552
Gasket, Oil Pan	42020	Starter Solenoid	36218
Gasket Set, Upper	42943	Switch, On	33632
Gasket Set, Complete	42944	Switch, Start/Stop	42521
Governor	42822	Tank, Coolant Recovery	24977
Heat Exchanger	43282	Thermostat	39378
Heat Exchanger End Cap	22850	Thermostat Mounting Gasket	42260
Heat Exchanger Gasket	22851	Valve Cover Gasket	42688
Hourmeter	42388	Voltmeter	N/A
Ignition Coil	42520	Water Temperature Meter	N/A
Isolators, Front Left	42373	Water Temperature Sender	N/A
isolators, Rear & Front Right	42810	Water Temperature Switch	39550
Manual, Operator	42832	Water Injected Exhaust Elbow	42724
Manual, Parts list	44900	Wire Set, Sparkplug &Coil	43060
Manual, Technical	44518	Zinc	11885

## 4.5 BCGTE Gasoline Generator Fast Moving Parts List

Description	Part #	Description	Part #
Air Sensor	42748	MAP Sensor	42130
Battery Charger	43096	Oil Pressure Switch	37323
Belt, Sea Water Pump	42790	Oil Pressure Meter	N/A
Belt, Governor	N/A	Oil Pressure Sender	N/A
Belt, Timing	43036	Panel, Genset Control	N/A
Belt Guard	42694	Panel, Remote Instrument	N/A
Capacitor 4.5 BCGTE	35985	Panel, Remote Start/Stop	42610
Capacitor 7.2 BCGTE	35978	Pump, Electronic Fuel	42190
Capacitor 9.6 BCGTE	41199	Pump, Fresh Water	43809
Circuit Breaker 20Amp 12VDC	24683	Pump, Mounting Gasket	43005
Dipstick	42273	Pump, Rebuild Kit	N/A
Distributor	42488	Pump, Sea Water	32617
Distributor Cap	43059	Pump, Mounting Gasket	N/A
Distributor Igniter	43053	Pump, impeller Kit	32620
Distributor Rotor	43050	Pump, Repair Kit	40455
EFI Control	43085	Rectifier	43649
Exhaust Temperature Switch	32923	Regulator, Fuel Pressure	42443
Filter, Lube Oil	36918	Remote Lube Oil Filter	40078
Filter Element, Fuel	40838	Resistor, Ballast	N/A
Fuse 2 amp	42495	Spare Parts Kit A	43072
Fuse 30 amp	43634	Spare Parts Kit B	43073
Gas denser	N/A	Sparkplug	43071
Gasket, Head	43029	Starter Motor	34552
Gasket, Oil Pan	42020	Starter Solenoid	36218
Gasket Set, Upper	43074	Switch, Start/Stop-Main	42486
Gasket Set, Complete	43075	Switch, Start/Stop-Remote	42521
Heat Exchanger	43282	Tank, Coolant Recovery	24977
Heat Exchanger End Cap	22850	Thermostat	39378
Heat Exchanger Gasket	22851	Thermostat Mounting Gasket	42260
Hourmeter	42388	Valve Cover Gasket	42688
Ignition Coil	42520	Voltmeter	N/A
Injector, Fuel	42221	Water Injected Exhaust Elbow	42724
isolators, Front Left	42373	Water Sensor	42749
Isolators, Rear & Front Right	42810	Water Temperature Meter	N/A
Magnetic Sensor	41318	Water Temperature Sender	N/A
Manual, Operator	42595	Water Temperature Switch	39550
Manual, Parts list	44900	Wire Set, Sparkplug & Coil	43060
Manual, Technical	44518	Zinc	11885

## 5.0 BCG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Air Filter/ Flame Arrestor	NA	Oil pressure Meter	N/A
Battery Charger	43096	Oil Pressure Sender	N/A
Belt, Water Pump Fresh	46813	Overspeed Shutdown	46723
Belt, std Alternator	N/A	Panel, Genset Control	46461
Belt, Timing	43036	Panel, Remote Instrument	N/A
Belt Guard	46425	Panel, Remote Start/Stop	42826
Capacitor	46875	Panel, Remote Start/Stop 15amp	43912
Carburetor	46740	PCV Valve	N/A
Circuit Breaker 20a 12vdc	24683	Pump, Fresh Water (Inc. Pulley )	43809
Controller Governor	46945	Pump, Mounting Gasket	43005
Dipstick	46803	Pump, Rebuild Kit - Fresh Water	N/A
Distributor	42488	Pump, Sea Water	42026
Distributor Cap	43059	Pump, Mounting Gasket (raw water)	N/A
Distributor Igniter	43053	Pump, Impeller Kit	46622
Distributor Rotor	43050	Pump, Repair Kit	46623
Dggenset Wire	46876	Pump, Seal	33043
Drip tray	N/A	Pump, Fuel Lift	46796
Exhaust Temperature Switch	32923	Rectifier	43649
Filter, Lube Oil	36918	Rely 12vdc 30amp w/diode	41150
Filter, Fuel	N/A	Remote Lube Oil Filter	40078
Fuse 8 amp	33769	Sensor Magnetic	46874
Fuse 30 amp	43634	Spare Parts Kit A	47002
Gasket, Head	43029	Spare Parts Kit B	N/A
Gasket, Oil Pan	42020	Spark plug	43071
Gasket Set, Upper	N/A	Starter Motor	46309
Gasket set Complete	N/A	Starter Solenoid	N/A
Governor, Actuator	46490	Switch, Start/stop	42521
Heat Exchanger	46292	Tank, Coolant Recovery	24977
Heat Exchanger End Cap	N/A	Thermostat	39378
Heat Exchanger Gasket	N/A	Thermostat Mounting Gasket	46124
Hour meter	42388	Valve Cover Gasket	42688
Ignition Coil	42520	Voltage Regulator	N/A
Isolators, Front	46272	Voltmeter	N/A
isolators, Rear	46272	Water Injected Exhaust Elbow	46157
Manual, Operator	46983	Water Temperature Meter	N/A
Manual, Parts list	N/A	Water Temperature Sender	N/A
Manual, Technical	N/A	Water Temperature Switch	39550
Manual, Installation	43268	Wire set, Spark plug	43060
Oil Pressure Switch	37323	Zinc	11885

## 5.0 BCGA Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Air Filter/ Flame Arrestor	NA	Oil pressure Meter	N/A
Battery Charger	43096	Oil Pressure Sender	N/A
Belt, Water Pump Fresh	46813	Over speed Shutdown	46723
Belt, std Alternator	N/A	Panel, Genset Control	46461
Belt, Timing	43036	Panel, Remote Instrument	N/A
Belt Guard	46425	Panel, Remote Start/Stop	42826
Capacitor	46639	Panel, Remote Start/Stop 15amp	43912
Carburetor	46740	PCV Valve	N/A
Circuit Breaker 20a 12vdc	24683	Pump, Fresh Water(Inc. Pulley )	43809
Controller Governor	46945	Pump, Mounting Gasket	43005
Dipstick	46803	Pump, Rebuild Kit - Fresh Water	N/A
Distributor	42488	Pump, Sea Water	42026
Distributor Cap	43059	Pump, Mounting Gasket (raw water)	N/A
Distributor Igniter	43053	Pump, Impeller Kit	46622
Distributor Rotor	43050	Pump, Repair Kit	46623
Dggenset Wire	46876	Pump, Seal	33043
Drip tray	N/A	Pump, Fuel Lift	46796
Exhaust Temperature Switch	32923	Rectifier	43649
Filter, Lube Oil	36918	Rely 12vdc 30amp w/diode	41150
Filter, Fuel	N/A	Remote Lube Oil Filter	40078
Fuse 8 amp	33769	Sensor Magnetic	46874
Fuse 30 amp	43634	Spare Parts Kit A	47002
Gasket, Head	43029	Spare Parts Kit B	N/A
Gasket, Oil Pan	42020	Spark plug	43071
Gasket Set, Upper	N/A	Starter Motor	46309
Gasket set Complete	N/A	Starter Solenoid	N/A
Governor, Actuator	46490	Switch, Start/stop	42521
Heat Exchanger	46292	Tank, Coolant Recovery	24977
Heat Exchanger End Cap	N/A	Thermostat	39378
Heat Exchanger Gasket	N/A	Thermostat Mounting Gasket	46124
Hourmeter	42388	Valve Cover Gasket	42688
Ignition Coil	42520	Voltage Regulator	N/A
Isolators, Front	46272	Voltmeter	N/A
Isolators, Rear	46272	Water Injected Exhaust Elbow	46157
Manual, Operator	46983	Water Temperature Meter	N/A
Manual, Parts list	N/A	Water Temperature Sender	N/A
Manual, Technical	N/A	Water Temperature Switch	39550
Manual, Installation	43268	Wire set, Spark plug	43060
Oil Pressure Switch	37323	Zinc	11885



## 6.5 BCG Gasoline Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	N/A	Panel, Control	35201
Armature	35970	Panel, Remote Instrument	36055
Battery Charger	35981	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	32977	Points	35740
Belt, STD Alternator	35440	Pump, Fresh Water	35599
Belt, FWP to Governor	N/A	Pump, Mounting Gasket	35602
Belt Guard	35157	Pump, Rebuild Kit	N/A
Cap, Distributor	35608	Pump, Sea Water	32617
Capacitor	35978	Pump Mounting Gasket	N/A
Carburetor	35343	Pump, Impeller Kit	32620
Carburetor Rebuild Kit	38100	Pump, Repair Kit	N/A
Diode	35971	Pump, Seal	N/A
Distributor	35451	Pump, Fuel Lift	33630
Distributor Igniter	N/A	Rectifier	43649
Drip Tray	36376	Remote Lube Oil Filter	N/A
Exhaust Manifold	37326	Resistor Ballast	35665
Exhaust Temp. Switch	32923	Rotor, Distributor	35609
Filter, Lube Oil	35595	Spare Parts Kit A	35694
Filter, Fuel Oil	N/A	Spare Parts Kit B	35695
Filter, Electric Lift	35920	Sparkplug	33805
Gas denser	38241	Starter	34552
Gasket Set, Upper	35692	Starter Solenoid	36218
Gasket Set, Complete	35693	Stator Incl. Housing	35973
Generator Assembly	37438	Stop Switch	33631
Governor	34821	Thermostat	35736
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	34196
Heat Exchanger	36891	Transformer	N/A
Heat Exchanger End Cap	33297	Valve PCV	N/A
Heat Exchanger Gasket	33298	Valve Cover Gasket	35479
Hour Meter	12892	Voltage Regulator	N/A
Ignition Coil	35667	Voltmeter	37605
Isolators	24776	Water Temp Meter	37601
Manuals, Operators	35729	Water Temp Sender	35109
Manuals, Parts	36194	Water Temp Switch	39550
Manuals, Technical	36209	Water Injected Elbow	Note 1
Module, Pickup	35619	Wire Set	Note 2
Oil Pressure Switch	37323	Zinc	11885
Over speed Switch	41183		

Note1: Water Injected Elbow 34486 (45°) - 33067(90°)

Note2: Wire Set Requires (2) 35669 & (1) 35670

## 6.5 TWG Gasoline Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Control	33780
Armature	33829	Panel, Remote Instrument	36055
Battery Charger	N/A	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	33681	Points	N/A
Belt, STD Alternator	30592	Pump, Fresh Water	34563
Belt, FWP to Governor	N/A	Pump, Mounting Gasket	34086
Belt Guard	33573	Pump, Rebuild Kit	N/A
Cap, Distributor	34113	Pump, Sea Water	24102
Capacitor	30806	Pump Mounting Gasket	N/A
Carburetor	33751	Pump, Impeller Kit	33112
Carburetor Rebuild Kit	N/A	Pump, Repair Kit	24652
Diode	N/A	Pump, Seal	24649
Distributor	33807	Pump, Fuel Lift	33630
Distributor Igniter	34164	Rectifier	43649
Drip Tray	NLA	Remote Lube Oil Filter	N/A
Exhaust Manifold	37327	Resistor, Ballast	N/A
Exhaust Temp. Switch	32923	Rotor, Distributor	34093
Filter, Lube Oil	36918	Spare Parts Kit A	33803
Filter, Fuel oil	N/A	Spare Parts Kit B	33804
Filter, Electric Lift	35920	Sparkplug	33805
Gas denser	N/A	Starter	NLA
Gasket Set, Upper	33801	Starter Solenoid	36321
Gasket Set, Complete	33802	Stator Incl. Housing	33834
Generator Assembly	33289	Stop Switch	33631
Governor	33560	Thermostat	35736
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	33417
Heat Exchanger	36897	Transformer	N/A
Heat Exchanger End Cap	22850	Valve PCV	33808
Heat Exchanger Gasket	22851	Valve Cover Gasket	33819
Hour Meter	Note 1	Voltage Regulator	24579
Ignition Coil	33806	Voltmeter	37605
Isolators	Note 2	Water Temp Meter	37601
Manuals, Operators	33974	Water Temp Sender	35109
Manuals, Parts	34908	Water Temp Switch	39550
Manuals, Technical	34645	Water Injected Elbow	34486
Module, Pickup	40609	Wire Set	33817
Oil Pressure Switch	33935	Zinc	11885
Over speed Switch	41196		

Note1: Hour Meter - Before 1986 Use 12892 ; 1986 & After Use 36192

Note2: Isolators - Front Use 24776 ; Rear Use 21529

## 7.0 BCG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Alternator	N/A	Panel, Control	37995
Armature	35970	Panel, Remote Instrument	36055
Battery Charger	35981	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	N/A	Points	37929
Belt, STD Alternator	N/A	Pump, Fresh Water	37919
Belt, FWP to Governor	35299	Pump, Mounting Gasket	37921
Belt Guard	37618	Pump, Rebuild Kit	N/A
Cap, Distributor	37925	Pump, Sea Water	32617
Capacitor	35978	Pump Mounting Gasket	N/A
Carburetor	38949	Pump, Impeller Kit	32620
Carburetor Rebuild Kit	38100	Pump, Repair Kit	N/A
Diode	35971	Pump, Seal	N/A
Distributor	37924	Pump, Fuel Lift	39273
Distributor Igniter	N/A	Rectifier	43649
Drip Tray	36377	Remote Lube Oil Filter	40078
Exhaust Manifold	37320	Resistor ballast	N/A
Exhaust Temp. Switch	32923	Rotor, Distributor	37926
Filter, Lube Oil	36918	Spare Parts Kit A	38571
Filter, Fuel oil	N/A	Spare Parts Kit B	38572
Filter, Electric Lift	N/A	Sparkplug	38568
Gas denser	38201	Starter	34552
Gasket Set, Upper	38569	Starter Solenoid	36218
Gasket Set, Complete	38570	Stator Incl. Housing	35973
Generator Assembly	N/A	Stop Switch	33631
Governor	33560	Thermostat	37387
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	37922
Heat Exchanger	37772	Transformer	N/A
Heat Exchanger End Cap	22850	Valve PCV	N/A
Heat Exchanger Gasket	22851	Valve Cover Gasket	38537
Hour Meter	36192	Voltage Regulator	N/A
Ignition Coil	37968	Voltmeter	37605
Isolators	24776	Water Temp Meter	37601
Manuals, Operators	38310	Water Temp Sender	35109
Manuals, Parts	37984	Water Temp Switch	39550
Manuals, Technical	38747	Water Injected Elbow	37402
Module, Pickup	N/A	Wire Set	38566
Oil Pressure Switch	37323	Zinc	11885
Over speed Switch	41183		

## 7.0 BCGA Gasoline Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	N/A	Panel, Control	37995
Armature	35970	Panel, Remote Instrument	36055
Battery Charger	35981	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	N/A	Points	37929
Belt, STD Alternator	N/A	Pump, Fresh Water	37919
Belt, FWP to Governor	35299	Pump, Mounting Gasket	37921
Belt Guard	37618	Pump, Rebuild Kit	N/A
Cap, Distributor	37925	Pump, Sea Water	32617
Capacitor	35978	Pump Mounting Gasket	N/A
Carburetor	38949	Pump, Impeller Kit	32620
Carburetor Rebuild Kit	38100	Pump, Repair Kit	N/A
Diode	35971	Pump, Seal	N/A
Distributor	37924	Pump, Fuel Lift	39273
Distributor Igniter	N/A	Rectifier	43649
Drip Tray	36377	Remote Lube Oil Filter	40078
Exhaust Manifold	37320	Resistor ballast	N/A
Exhaust Temp. Switch	32923	Rotor, Distributor	37926
Filter, Lube Oil	36918	Spare Parts Kit A	38571
Filter, Fuel oil	N/A	Spare Parts Kit B	38572
Filter, Electric Lift	N/A	Sparkplug	38568
Gas denser	38201	Starter	34552
Gasket Set, Upper	38569	Starter Solenoid	36218
Gasket Set, Complete	38570	Stator Incl. Housing	38752
Generator Assembly	N/A	Stop Switch	33631
Governor	33560	Thermostat	37387
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	37922
Heat Exchanger	37772	Transformer	N/A
Heat Exchanger End Cap	22850	Valve PCV	N/A
Heat Exchanger Gasket	22851	Valve Cover Gasket	38537
Hour Meter	36192	Voltage Regulator	N/A
Ignition Coil	37968	Voltmeter	37605
Isolators	24776	Water Temp Meter	37601
Manuals, Operators	38310	Water Temp Sender	35109
Manuals, Parts	37984	Water Temp Switch	39550
Manuals, Technical	38747	Water Injected Elbow	37402
Module, Pickup	N/A	Wire Set	38566
Oil Pressure Switch	37323	Zinc	11885
Over speed Switch	41183		

## 7.0 BCGB Gasoline Generator Fast Moving Parts List

Description	Part#	Description	Part #
Battery Charger	43096	Oil Pressure Sender	N/A
Belt, Sea Water Pump	42790	Oil Temperature Switch	43242
Belt, Governor	42798	Over speed Shutdown	43836
Belt, Timing	43036	Panel, Genset Control	43834
Belt Guard	44188	Panel, Remote Instrument	N/A
Capacitor	35978	Panel, Remote Start/Stop	43912
Carburetor	43788	Pump, Fresh Water	43809
Carburetor Rebuild Kit		Pump Mounting Gasket	N/A
Circuit Breaker 20Am 12VDC	24683	Pump, Rebuild Kit	43809
Diode	35971	Pump, Sea Water	43275
Dipstick	42273	Pump Mounting Gasket	N/A
Distributor	42488	Pump, Impeller Kit	32620
Distributor Cap	43059	Pump, Repair Kit	40455
Distributor Igniter	43053	Pump, Fuel Lift	39273
Distributor Rotor	43050	Rectifier	43649
Exhaust Temperature Switch	32923	Remote Lube Oil Filter	40078
Filter, Lube Oil	36918	Resistor, Ballast	N/A
Filter, Fuel	N/A	Solenoid, Carburetor Choke	38038
Fuse 8 amp	33769	Spare Parts Kit A	42941
Fuse 30 amp	43634	Spare Parts Kit B	
Gasdenser	43125	Sparkplug	43071
Gasket, Head	43029	Starter Motor	34552
Gasket, Oil Pan	42110	Starter Solenoid	32618
Gasket Set, Upper		Switch, On	33632
Gasket Set, Complete		Switch, Start/Stop	42521
Governor	43793	Tank, Coolant Recovery	24977
Heat Exchanger	43282	Thermostat	39378
Heat Exchanger End Ca	22850	Thermostat Mounting Gasket	42260
Heat Exchanger Gasket	22851	Valve Cover Gasket	42688
Hourmeter	42388	Voltmeter	N/A
Ignition Coil	42520	Water Temperature Meter	N/A
Isolators, Front	42810	Water Temperature Sender	N/A
Isolators, Rear	42810	Water Temperature Switch	39550
Manual, Operator	44200	Water Injected Exhaust Elbow	
Manual, Parts list	45000	Wire Set, Sparkplug &Coil	43060
Manual, Technical	44898	Zinc	11885
Oil Pressure Switch	37323		
Oil Pressure Meter	N/A		

## 7.0 BCGC Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Air Filter/ Flame Arrestor	NA	Oil pressure Meter	N/A
Battery Charger	43096	Oil Pressure Sender	N/A
Belt, Water Pump Fresh	46813	Over speed Shutdown	46723
Belt, std Alternator	N/A	Panel, Genset Control	46461
Belt, Timing	43036	Panel, Remote Instrument	N/A
Belt Guard	46425	Panel, Remote Start/Stop	42826
Capacitor	46875	Panel, Remote Start/Stop 15amp	43912
Carburetor	46740	PCV Valve	N/A
Circuit Breaker 20a 12vdc	24683	Pump, Fresh Water (Inc. Pulley )	43809
Controller Governor	46945	Pump, Mounting Gasket	43005
Dipstick	46803	Pump, Rebuild Kit - Fresh Water	N/A
Distributor	42488	Pump, Sea Water	42026
Distributor Cap	43059	Pump, Mounting Gasket (raw water)	N/A
Distributor Igniter	43053	Pump, Impeller Kit	46622
Distributor Rotor	43050	Pump, Repair Kit	46623
DG genset Wire	46876	Pump, Seal	33043
Drip tray	N/A	Pump, Fuel Lift	46796
Exhaust Temperature Switch	32923	Rectifier	43649
Filter, Lube Oil	36918	Rely 12vdc 30amp w/diode	41150
FILTER, Fuel	N/A	Remote Lube Oil Filter	40078
Fuse 8 amp	33769	Sensor Magnetic	46874
Fuse 30 amp	43634	Spare Parts Kit A	N/A
Gasket, Head	43029	Spare Parts Kit B	N/A
Gasket, Oil Pan	42020	Sparkplug	43071
Gasket Set, Upper	N/A	Starter Motor	46309
Gasket set Complete	N/A	Starter Solenoid	36218
Governor, Actuator	46490	Switch, Start/stop	42521
Heat Exchanger	46292	Tank, Coolant Recovery	24977
Heat Exchanger End Cap	N/A	Thermostat	39378
Heat Exchanger Gasket	N/A	Thermostat Mounting Gasket	46124
Hourmeter	42388	Valve Cover Gasket	42688
Ignition Coil	42520	Voltage Regulator	N/A
Isolators, Front	46272	Voltmeter	N/A
isolators, Rear	46272	Water Injected Exhaust Elbow	46157
Manual, Operator	46983	Water Temperature Meter	N/A
Manual, Parts list	N/A	Water Temperature Sender	N/A
Manual, Technical	N/A	Water Temperature Switch	39550
Manual, Installation	43268	Wire set, Sparkplug	43060
Oil Pressure Switch	37323	Zinc	11885

## 7.2 BCGTC Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part#</b>	<b>Description</b>	<b>Part#</b>
Battery Charger	43096	Oil Pressure Switch	37323
Belt, Sea Water Pump	42790	Oil Pressure Meter	N/A
Belt, Governor	42798	Oil Pressure Sender	N/A
Belt, Timing	43036	Oil Temperature Switch	43242
Belt Guard	42694	Over speed Shutdown	43240
Capacitor 4.5 BCGTC	35985	Panel, Genset Control	N/A
Capacitor 7.2 BCGTC	35978	Panel, Remote Instrument	N/A
Capacitor 9.6 BCGTC	41199	Panel, Remote Start/Stop	42826
Carburetor	42776	Pump, Fresh Water	43809
Carburetor Rebuild Kit	38100	Pump, Mounting Gasket	43005
Circuit Breaker 20Amp 12VDC	24683	Pump, Rebuild Kit	N/A
Diode		Pump, Sea Water	32617
Dipstick	42273	Pump, Mounting Gasket	N/A
Distributor	42488	Pump, Impeller Kit	32620
Distributor Cap	43059	Pump, Repair Kit	40455
Distributor Igniter	43053	Pump, Fuel Lift	39273
Distributor Rotor	43050	Rectifier	43649
Exhaust Temperature Switch	32923	Remote Lube Oil Filter	40078
Filter, Lube Oil	36918	Resistor, Ballast	N/A
Filter, Fuel	47006	Solenoid, Carburetor w/jet	43800
Fuse 8 amp	33769	Spare Parts Kit A	42941
Fuse 30 amp	43634	Spare Parts Kit B	42942
Gasdenser	43125	Sparkplug	43071
Gasket, Head	43029	Starter Motor	34552
Gasket, Oil Pan	42020	Starter Solenoid	36218
Gasket Set, Upper	42943	Switch, On	33632
Gasket Set, Complete	42944	Switch, Start/Stop	42521
Governor	42822	Tank, Coolant Recovery	24977
Heat Exchanger	43282	Thermostat	39378
Heat Exchanger End Cap	22850	Thermostat Mounting Gasket	42260
Heat Exchanger Gasket	22851	Valve Cover Gasket	42688
Hourmeter	42388	Voltmeter	N/A
Ignition Coil	42520	Water Temperature Meter	N/A
Isolators, Front Left	42373	Water Temperature Sender	N/A
isolators, Rear & Front Right	42810	Water Temperature Switch	39550
Manual, Operator	42832	Water Injected Exhaust Elbow	42724
Manual, Parts list	44900	Wire Set, Sparkplug &Coil	43060
Manual, Technical	44518	Zinc	11885

## 7.2 BCGTE Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Air Sensor	42748	MAP Sensor	42130
Battery Charger	43096	Oil Pressure Switch	37323
Belt, Sea Water Pump	42790	Oil Pressure Meter	N/A
Belt, Governor	N/A	Oil Pressure Sender	N/A
Belt, Timing	43036	Panel, Genset Control	N/A
Belt Guard	42694	Panel, Remote Instrument	N/A
Capacitor 4.5 BCGTE	35985	Panel, Remote Start/Stop	42610
Capacitor 7.2 BCGTE	35978	Pump, Electronic Fuel	42190
Capacitor 9.6 BCGTE	41199	Pump, Fresh Water	43809
Circuit Breaker 20Amp 12VDC	24683	Pump, Mounting Gasket	43005
Dipstick	42273	Pump, Rebuild Kit	N/A
Distributor	42488	Pump, Sea Water	32617
Distributor Cap	43059	Pump, Mounting Gasket	N/A
Distributor Igniter	43053	Pump, impeller Kit	32620
Distributor Rotor	43050	Pump, Repair Kit	40455
EFI Control	43085	Rectifier	43649
Exhaust Temperature Switch	32923	Regulator, Fuel Pressure	42443
Filter, Lube Oil	36918	Remote Lube Oil Filter	40078
Filter Element, Fuel	40838	Resistor, Ballast	N/A
Fuse 2 amp	42495	Spare Parts Kit A	43072
Fuse 30 amp	43634	Spare Parts Kit B	43073
Gasdenser	N/A	Sparkplug	43071
Gasket, Head	43029	Starter Motor	34552
Gasket, Oil Pan	42020	Starter Solenoid	36218
Gasket Set, Upper	43074	Switch, Start/Stop-Main	42486
Gasket Set, Complete	43075	Switch, Start/Stop-Remote	42521
Heat Exchanger	43282	Tank, Coolant Recovery	24977
Heat Exchanger End Cap	22850	Thermostat	39378
Heat Exchanger Gasket	22851	Thermostat Mounting Gasket	42260
Hourmeter	42388	Valve Cover Gasket	42688
Ignition Coil	42520	Voltmeter	N/A
Injector, Fuel	42221	Water Injected Exhaust Elbow	42724
isolators, Front Left	42373	Water Sensor	42749
Isolators, Rear & Front Right	42810	Water Temperature Meter	N/A
Magnetic Sensor	41318	Water Temperature Sender	N/A
Manual, Operator	42595	Water Temperature Switch	39550
Manual, Parts list	44900	Wire Set, Sparkplug & Coil	43060
Manual, Technical	44518	Zinc	11885



## 8.0 BEG Gasoline Generator Fast Moving Parts List

Description	Part#	Description	Part #
Air Filter/ Flame Arrestor	35289	Oil Pressure Meter	37603
Battery Charger	N/A	Oil Pressure Sender	24132
Belt, Water Pumps	46025	Over speed Shutdown	41196
Belt, Std Alternator	46026	Panel, Genset Control	46361
Belt, Timing	46591	Panel, Remote Instrument	36055
Belt Guard	46172	Panel, Remote Start/Stop	43914
Carburetor	46444	Panel, Remote Start/Stop 15p	43912
Carburetor Rebuild Kit	N/A	PCV Valve	46595
Circuit Breaker 20a 12vdc	24683	Pump, Fresh Water	46594
Diode		Pump, Mounting Gasket	N/A
Dipstick	N/A	Pump, Rebuild Kit	N/A
Distributor	46493	Pump, Sea Water	42026
Distributor Cap	46592	Pump, Mounting Gasket	N/A
Distributor Igniter	46593	Pump, Impeller Kit	46622
Distributor Rotor	43050	Pump, Repair Kit	46623
Driptray	N/A	Pump, Fuel Lift	39273
Exhaust Temperature Switch	32923	Rectifier	N/A
Filter, Lube Oil	36918	Remote Lube Oil Filter	32149
Filter, Fuel	N/A	Resistor, Ballast	N/A
Fuse 8 amp	33769	Spare Parts Kit A	46620
Fuse 30 amp	N/A	Spare Parts Kit B	46621
Gasdenser	38052	Spark plug	43071
Gasket, Head	46600	Starter Motor	34552
Gasket, Oil Pan	N/A	Starter Solenoid	36218
Gasket Set, Upper	46618	Switch, On	33632
Gasket Set, Complete	46619	Switch, Start/Stop	42521
Governor	46225	Tank, Coolant Recovery	24977
Heat Exchanger	46578	Thermostat	46097
Heat Exchanger End Cap	33297	Thermostat Mounting Gasket	33417
Heat Exchanger Gasket	33298	Valve Cover Gasket	46595
Hourmeter	42388	Voltage Regulator	46446
Ignition Coil	46492	Voltmeter	37605
Isolators, Front	21529	Water Injected Exhaust Elbow	46617
Isolators, Rear	21529	Water Temperature Meter	37601
Manual, Operator	46221	Water Temperature Sender	35109
Manual, Parts list		Water Temperature Switch	39550
Manual, Technical		Wire Set, Sparkplug	46596
Oil Pressure Switch	37323	Zinc	11885

## 8.0 TWG Gasoline Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Control	33780
Armature	31082	Panel, Remote Instrument	36055
Battery Charger	N/A	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	33681	Points	N/A
Belt, STD Alternator	30592	Pump, Fresh Water	34563
Belt, FWP to Governor	N/A	Pump, Mounting Gasket	33481
Belt Guard	33573	Pump, Rebuild Kit	N/A
Cap, Distributor	34113	Pump, Sea Water	24102
Capacitor	30806	Pump Mounting Gasket	N/A
Carburetor	33751	Pump, Impeller Kit	33112
Carburetor Rebuild Kit	N/A	Pump, Repair Kit	24652
Diode	N/A	Pump, Seal	24649
Distributor	33807	Pump, Fuel Lift	33630
Distributor Igniter	34164	Rectifier	43649
Drip Tray	33744	Remote Lube Oil Filter	32149
Exhaust Manifold	37327	Resistor, Ballast	N/A
Exhaust Temp. Switch	32923	Rotor, Distributor	34093
Filter, Lube Oil	36918	Spare Parts Kit A	33803
Filter, Fuel oil	N/A	Spare Parts Kit B	34804
Filter, Electric Lift	35920	Sparkplug	33805
Gas denser	N/A	Starter	NLA
Gasket Set, Upper	33801	Starter Solenoid	36321
Gasket Set, Complete	33802	Stator Inc. Housing	31073
Generator Assembly	33396	Stop Switch	33631
Governor	33560	Thermostat	35736
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	34196
Heat Exchanger	36897	Transformer	N/A
Heat Exchanger End Cap	22850	Valve PCV	N/A
Heat Exchanger Gasket	22851	Valve Cover Gasket	33819
Hour Meter	36192	Voltage Regulator	24579
Ignition Coil	33806	Voltmeter	37605
Isolators	Note 1	Water Temp Meter	37601
Manuals, Operators	33974	Water Temp Sender	35109
Manuals, Parts	34630	Water Temp Switch	39550
Manuals, Technical	34645	Water Injected Elbow	Note 2
Module, Pickup	40609	Wire Set	33817
Oil Pressure Switch	37323	Zinc	11885
Overspeed Switch	41196		

Note1: Isolators - Front Use 24776 ; Rear Use 21529

Note2: Water Injected Elbow 34486 (45°) - 33067 (90°)

## 8.5 TWG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Battery Charger	N/A	Overspeed Shutdown	41196
Belt, Sea Water Pump	33681	Panel, Genset Control	37149
Belt's Alternator	30475	Panel, Remote Instrument	36055
Belt, Timing		Panel, Remote Start/Stop	33703
Belt Guard	36231	Pump, Fresh Water	34653
Capacitor		Pump, Mounting Gasket	33481
Carburetor	33751	Pump, Rebuild Kit	N/A
Carburetor Rebuild Kit	36450	Pump, Sea Water	24102
Circuit Breaker	24683	Pump, Mounting Gasket	N/A
Diode	35931	Pump, Impeller Kit	33112
Dipstick		Pump, Repair Kit	24652
Distributor	34106	Pump Seal	24649
Distributor Cap	34113	Pump, Fuel Lift	39273
Distributor Igniter	34164	Rectifier	30809
Distributor Rotor	34093	Remote Lube Oil Filter	32149
Exhaust Temperature Switch	32923	Resistor, Ballast	
Filter, Lube Oil	36918	Solenoid, Carburetor Choke	
Filter, Fuel	N/A	Spare Parts Kit A	33803
Gas denser	38052	Spare Parts Kit B	34570
Gasket, Head		Spark plug	33805
Gasket, Oil Pan		Starter Motor	34552
Gasket Set, Upper	34568	Starter Solenoid	36218
Gasket Set, Complete	34569	Switch, On	33633
Governor	33560	Switch, Start	33632
Heat Exchanger	36902	Switch, Stop	33631
Heat Exchanger End Cap	22850	Tank, Coolant Recovery	24977
Heat Exchanger Gasket	22851	Thermostat	35736
Hourmeter	36192	Thermostat Mounting Gasket	33417
Ignition Coil	33806	Transformer	37463
Isolators, Front	21529	Valve Cover Gasket	33819
Isolators, Rear	21529	Voltage Regulator	34410
Manual, Operator	35909	Voltmeter	37605
Manual, Parts list	37315	Water Temperature Meter	37601
Manual, Technical	37375	Water Temperature Sender	35109
		Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow	37534
Oil Pressure Meter	37603	Wire Set	33817
Oil Pressure Sender	24132	Zinc	11885

## 8.5 BTGA Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Battery Charger	N/A	Overspeed Shutdown	41196
Belt, Sea Water Pump	33681	Panel, Genset Control	37149
Belt, Std Alternator	30475	Panel, Remote Instrument	36055
Belt, Timing		Panel, Remote Start/Stop	33703
Belt Guard	36231	Pump, Fresh Water	34653
Capacitor		Pump, Mounting Gasket	33481
Carburetor	33751	Pump, Rebuild Kit	N/A
Carburetor Rebuild Kit	36450	Pump, Sea Water	24102
Circuit Breaker	24683	Pump, Mounting Gasket	N/A
Diode	35931	Pump, Impeller Kit	33112
Dipstick		Pump, Repair Kit	24652
Distributor	34106	Pump Seal	24649
Distributor Cap	34113	Pump, Fuel Lift	39273
Distributor Igniter	34164	Rectifier	30809
Distributor Rotor	34093	Remote Lube Oil Filter	32149
Exhaust Temperature Switch	32923	Resistor, Ballast	
Filter, Lube Oil	36918	Solenoid, Carburetor Choke	
Filter, Fuel	N/A	Spare Parts Kit A	33803
Gasdenser	38052	Spare Parts Kit B	34570
Gasket, Head		Spark plug	33805
Gasket, Oil Pan		Starter Motor	34552
Gasket Set, Upper	34568	Starter Solenoid	36218
Gasket Set, Complete	34569	Switch, On	33633
Governor	33560	Switch, Start	33632
Heat Exchanger	36902	Switch, Stop	33631
Heat Exchanger End Cap	22850	Tank, Coolant Recovery	24977
Heat Exchanger Gasket	22851	Thermostat	35736
Hourmeter	36192	Thermostat Mounting Gasket	33417
Ignition Coil	33806	Transformer	37463
Isolators, Front	21529	Valve Cover Gasket	33819
Isolators, Rear	21529	Voltage Regulator	34410
Manual, Operator	35909	Voltmeter	37605
Manual, Parts list	37315	Water Temperature Meter	37601
Manual, Technical	37375	Water Temperature Sender	35109
		Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow	37534
Oil Pressure Meter	37603	Wire Set	33817
Oil Pressure Sender	24132	Zinc	11885

## 9.0 BTG Gasoline Generator Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	40420	Panel, Control	35194
Armature	35930	Panel, Remote Instrument	36055
Battery Charger	N/A	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	33681	Points	35740
Belt, STD Alternator	13585	Pump, Fresh Water	35599
Belt, FWP to Governor	N/A	Pump, Mounting Gasket	35602
Belt Guard	36396	Pump, Rebuild Kit	N/A
Cap, Distributor	35608	Pump, Sea Water	32617
Capacitor	N/A	Pump Mounting Gasket	N/A
Carburetor	35343	Pump, Impeller Kit	32620
Carburetor Rebuild Kit	N/A	Pump, Repair Kit	N/A
Diode	35931	Pump, Seal	N/A
Distributor	36178	Pump, Fuel Lift	33630
Distributor Igniter	N/A	Rectifier	43649
Drip Tray	36377	Remote Lube Oil Filter	N/A
Exhaust Manifold	37317	Resistor Ballast	N/A
Exhaust Temp. Switch	32923	Rotor, Distributor	42201
Filter, Lube Oil	35595	Spare Parts Kit A	37300
Filter, Fuel oil	N/A	Spare Parts Kit B	37373
Filter, Electric Lift	35920	Sparkplug	33805
Gasdenser	N/A	Starter	34552
Gasket Set, Upper	35692	Starter Solenoid	36218
Gasket Set, Complete	35693	Stator Incl. Housing	35934
Generator Assembly	37428	Stop Switch	33631
Governor	36380	Thermostat	35736
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	34196
Heat Exchanger	36901	Transformer	35937
Heat Exchanger End Cap	22850	Valve PCV	N/A
Heat Exchanger Gasket	22851	Valve Cover Gasket	35479
Hour Meter	36192	Voltage Regulator	34410
Ignition Coil	36162	Voltmeter	<u>37605</u>
Isolators	24776	Water Temp Meter	<u>37601</u>
Manuals, Operators	36710	Water Temp Sender	<u>35109</u>
Manuals, Parts	36801	Water Temp Switch	39550
Manuals, Technical	36209	Water Injected Elbow	Note1
Module, Pickup	N/A	Wire Set	Note2
Oil Pressure Switch	37323	Zinc	11885
Overspeed Switch	41183		
Note1: Water Injected Elbow 34486 (45°) - 33067(90°)			
Note2: Wire Set Requires (2) 35669 & (1) 35670			

## 9.6 BCGTC Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part#</b>	<b>Description</b>	<b>Part#</b>
Battery Charger	43096	Oil Pressure Switch	37323
Belt, Sea Water Pump	42790	Oil Pressure Meter	N/A
Belt, Governor	42798	Oil Pressure Sender	N/A
Belt, Timing	43036	Oil Temperature Switch	43242
Belt Guard	42694	Overspeed Shutdown	43240
Capacitor 4.5 BCGTC	35985	Panel, Genset Control	N/A
Capacitor 7.2 BCGTC	35978	Panel, Remote Instrument	N/A
Capacitor 9.6 BCGTC	41199	Panel, Remote Start/Stop	42826
Carburetor	42776	Pump, Fresh Water	43809
Carburetor Rebuild Kit	38100	Pump, Mounting Gasket	43005
Circuit Breaker 20Amp 12VDC	24683	Pump, Rebuild Kit	N/A
Diode		Pump, Sea Water	32617
Dipstick	42273	Pump, Mounting Gasket	N/A
Distributor	42488	Pump, Impeller Kit	32620
Distributor Cap	43059	Pump, Repair Kit	40455
Distributor Igniter	43053	Pump, Fuel Lift	39273
Distributor Rotor	43050	Rectifier	43649
Exhaust Temperature Switch	32923	Remote Lube Oil Filter	40078
Filter, Lube Oil	36918	Resistor, Ballast	N/A
Filter, Fuel	N/A	Solenoid, Carburetor w/jet	43800
Fuse 8 amp	33769	Spare Parts Kit A	42941
Fuse 30 amp	43634	Spare Parts Kit B	42942
Gasdenser	43125	Sparkplug	43071
Gasket, Head	43029	Starter Motor	34552
Gasket, Oil Pan	42020	Starter Solenoid	36218
Gasket Set, Upper	42943	Switch, On	33632
Gasket Set, Complete	42944	Switch, Start/Stop	42521
Governor	42822	Tank, Coolant Recovery	24977
Heat Exchanger	43282	Thermostat	39378
Heat Exchanger End Cap	22850	Thermostat Mounting Gasket	42260
Heat Exchanger Gasket	22851	Valve Cover Gasket	42688
Hourmeter	42388	Voltmeter	N/A
Ignition Coil	42520	Water Temperature Meter	N/A
Isolators, Front Left	42373	Water Temperature Sender	N/A
Isolators, Rear & Front Right	42810	Water Temperature Switch	39550
Manual, Operator	42832	Water Injected Exhaust Elbow	42724
Manual, Parts list	44900	Wire Set, Sparkplug &Coil	43060
Manual, Technical	44518	Zinc	11885

## 10.0 BEG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part#</b>	<b>Description</b>	<b>Part #</b>
Air Filter/ Flame Arrestor	35289	Oil Pressure Meter	37603
Battery Charger	N/A	Oil Pressure Sender	24132
Belt, Water Pumps	46025	Overspeed Shutdown	41196
Belt, Std Alternator	46026	Panel, Genset Control	46361
Belt, Timing	46591	Panel, Remote Instrument	36055
Belt Guard	46172	Panel, Remote Start/Stop	43914
Carburetor	46444	Panel, Remote Start/Stop 15p	43912
Carburetor Rebuild Kit	N/A	PCV Valve	46595
Circuit Breaker 20a 12vdc	24683	Pump, Fresh Water	46594
Diode		Pump, Mounting Gasket	N/A
Dipstick	N/A	Pump, Rebuild Kit	N/A
Distributor	46493	Pump, Sea Water	42026
Distributor Cap	46592	Pump, Mounting Gasket	N/A
Distributor Igniter	46593	Pump, Impeller Kit	46622
Distributor Rotor	43050	Pump, Repair Kit	46623
Drip tray	N/A	Pump, Fuel Lift	39273
Exhaust Temperature Switch	32923	Rectifier	N/A
Filter, Lube Oil	36918	Remote Lube Oil Filter	32149
Filter, Fuel	N/A	Resistor, Ballast	N/A
Fuse 8 amp	33769	Spare Parts Kit A	46620
Fuse 30 amp	N/A	Spare Parts Kit B	46621
Gasdenser	38052	Spark plug	43071
Gasket, Head	46600	Starter Motor	34552
Gasket, Oil Pan	N/A	Starter Solenoid	36218
Gasket Set, Upper	46618	Switch, On	33632
Gasket Set, Complete	46619	Switch, Start/Stop	42521
Governor	46225	Tank, Coolant Recovery	24977
Heat Exchanger	46578	Thermostat	46097
Heat Exchanger End Cap	33297	Thermostat Mounting Gasket	33417
Heat Exchanger Gasket	33298	Valve Cover Gasket	46595
Hourmeter	42388	Voltage Regulator	46446
Ignition Coil	46492	Voltmeter	37605
Isolators, Front	21529	Water Injected Exhaust Elbow	46617
Isolators, Rear	21529	Water Temperature Meter	37601
Manual, Operator	46221	Water Temperature Sender	35109
Manual, Parts list		Water Temperature Switch	39550
Manual, Technical		Wire Set, Sparkplug	46596
Oil Pressure Switch	37323	Zinc	11885

## 11.0 TWG Gasoline Generators Fast Moving Parts List

Description	Part #	Description	Part #
Alternator	24684	Panel, Control	33780
Armature	31082	Panel, Remote Instrument	36055
Battery Charger	N/A	Panel, Remote Start/Stop	33703
Belt, Sea Water Pump	33681	Points	N/A
Belt, STD Alternator	30592	Pump, Fresh Water	34563
Belt, FWP to Governor	N/A	Pump, Mounting Gasket	33481
Belt Guard	33573	Pump, Rebuild Kit	N/A
Cap, Distributor	34113	Pump, Sea Water	24102
Capacitor	30806	Pump Mounting Gasket	N/A
Carburetor	33751	Pump, Impeller Kit	33112
Carburetor Rebuild Kit	N/A	Pump, Repair Kit	24652
Diode	N/A	Pump, Seal	24649
Distributor	34106	Pump, Fuel Lift	33630
Distributor Igniter	34164	Rectifier	43649
Drip Tray	33744	Remote Lube Oil Filter	32149
Exhaust Manifold	37327	Resistor, Ballast	N/A
Exhaust Temp. Switch	32923	Rotor, Distributor	34093
Filter, Lube Oil	36918	Spare Parts Kit A	33803
Filter, Fuel oil	N/A	Spare Parts Kit B	34570
Filter, Electric Lift	35920	Sparkplug	33805
Gasdenser	N/A	Starter	NLA
Gasket Set, Upper	34568	Starter Solenoid	36321
Gasket Set, Complete	34569	Stator Housing Only	31074
Generator Assembly	30864	Stop Switch	33631
Governor	33560	Thermostat	35736
Harness, 15 FT. EXT.	30760	Thermostat MTG Gasket	34196
Heat Exchanger	36897	Transformer	N/A
Heat Exchanger End Cap	22850	Valve PCV	N/A
Heat Exchanger Gasket	22851	Valve Cover Gasket	33819
Hour Meter	36192	Voltage Regulator	24579
Ignition Coil	33806	Voltmeter	37605
Isolators	Note 1	Water Temp Meter	37601
Manuals, Operators	33974	Water Temp Sender	35109
Manuals, Parts	34630	Water Temp Switch	39550
Manuals, Technical	34645	Water Injected Elbow	Note 2
Module, Pickup	40609	Wire Set	33817
Oil Pressure Switch	37323	Zinc	11885
Overspeed Switch	41196		

Note1: Isolators - Front Use 24776 ; Rear Use 21529

Note2: Water Injected Elbow 34486 (45°) - 33067 (90°)



## 12.5 BEG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part#</b>	<b>Description</b>	<b>Part #</b>
Air Filter/ Flame Arrestor	35289	Oil Pressure Meter	37603
Battery Charger	N/A	Oil Pressure Sender	24132
Belt, Water Pumps	46025	Overspeed Shutdown	41196
Belt, Std Alternator	46026	Panel, Genset Control	46361
Belt, Timing	46591	Panel, Remote Instrument	36055
Belt Guard	46172	Panel, Remote Start/Stop	43914
Carburetor	46444	Panel, Remote Start/Stop 15p	43912
Carburetor Rebuild Kit	N/A	PCV Valve	46595
Circuit Breaker 20a 12vdc	24683	Pump, Fresh Water	46594
Diode		Pump, Mounting Gasket	N/A
Dipstick	N/A	Pump, Rebuild Kit	N/A
Distributor	46493	Pump, Sea Water	42026
Distributor Cap	46592	Pump, Mounting Gasket	N/A
Distributor Igniter	46593	Pump, Impeller Kit	46622
Distributor Rotor	43050	Pump, Repair Kit	46623
Drip tray	N/A	Pump, Fuel Lift	39273
Exhaust Temperature Switch	32923	Rectifier	N/A
Filter, Lube Oil	36918	Remote Lube Oil Filter	32149
Filter, Fuel	N/A	Resistor, Ballast	N/A
Fuse 8 amp	33769	Spare Parts Kit A	46620
Fuse 30 amp	N/A	Spare Parts Kit B	46621
Gasdenser	38052	Spark plug	43071
Gasket, Head	46600	Starter Motor	34552
Gasket, Oil Pan	N/A	Starter Solenoid	36218
Gasket Set, Upper	46618	Switch, On	33632
Gasket Set, Complete	46619	Switch, Start/Stop	42521
Governor	46225	Tank, Coolant Recovery	24977
Heat Exchanger	46578	Thermostat	46097
Heat Exchanger End Cap	33297	Thermostat Mounting Gasket	33417
Heat Exchanger Gasket	33298	Valve Cover Gasket	46595
Hourmeter	42388	Voltage Regulator	46446
Ignition Coil	46492	Voltmeter	37605
Isolators, Front	21529	Water Injected Exhaust Elbow	46617
Isolators, Rear	21529	Water Temperature Meter	37601
Manual, Operator	46221	Water Temperature Sender	35109
Manual, Parts list		Water Temperature Switch	39550
Manual, Technical		Wire Set, Sparkplug	46596
Oil Pressure Switch	37323	Zinc	11885

## 12.5 BTG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Battery Charger	N/A	Overspeed Shutdown	41196
Belt, Sea Water Pump	33681	Panel, Genset Control	37149
Belt, Std Alternator	30475	Panel, Remote Instrument	36055
Belt, Timing		Panel, Remote Start/Stop	33703
Belt Guard	36231	Pump, Fresh Water	34653
Capacitor		Pump, Mounting Gasket	33481
Carburetor	33751	Pump, Rebuild Kit	N/A
Carburetor Rebuild Kit	36450	Pump, Sea Water	24102
Circuit Breaker	24683	Pump, Mounting Gasket	N/A
Diode	35931	Pump, Impeller Kit	33112
Dipstick		Pump, Repair Kit	24652
Distributor	34106	Pump Seal	24649
Distributor Cap	34113	Pump, Fuel Lift	39273
Distributor Igniter	34164	Rectifier	30809
Distributor Rotor	34093	Remote Lube Oil Filter	32149
Exhaust Temperature Switch	32923	Resistor, Ballast	
Filter, Lube Oil	36918	Solenoid, Carburetor Choke	
Filter, Fuel	N/A	Spare Parts Kit A	33803
Gasdenser	38052	Spare Parts Kit B	34570
Gasket, Head		Spark plug	33805
Gasket, Oil Pan		Starter Motor	34552
Gasket Set, Upper	34568	Starter Solenoid	36218
Gasket Set, Complete	34569	Switch, On	33633
Governor	33560	Switch, Start	33632
Heat Exchanger	36902	Switch, Stop	33631
Heat Exchanger End Cap	22850	Tank, Coolant Recovery	24977
Heat Exchanger Gasket	22851	Thermostat	35736
Hourmeter	36192	Thermostat Mounting Gasket	33417
Ignition Coil	33806	Transformer	37463
Isolators, Front	21529	Valve Cover Gasket	33819
Isolators, Rear	21529	Voltage Regulator	34410
Manual, Operator	35909	Voltmeter	37605
Manual, Parts list	37315	Water Temperature Meter	37601
Manual, Technical	37375	Water Temperature Sender	35109
		Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow	37534
Oil Pressure Meter	37603	Wire Set	33817
Oil Pressure Sender	24132	Zinc	11885

## 15.0 BEG Gasoline Generators Fast Moving Parts List

<b>Description</b>	<b>Part#</b>	<b>Description</b>	<b>Part #</b>
Air Filter/ Flame Arrestor	35289	Oil Pressure Meter	37603
Battery Charger	N/A	Oil Pressure Sender	24132
Belt, Water Pumps	46025	Overspeed Shutdown	41196
Belt, Std Alternator	46026	Panel, Genset Control	46361
Belt, Timing	46591	Panel, Remote Instrument	36055
Belt Guard	46172	Panel, Remote Start/Stop	43914
Carburetor	46444	Panel, Remote Start/Stop 15p	43912
Carburetor Rebuild Kit	N/A	PCV Valve	46595
Circuit Breaker 20a 12vdc	24683	Pump, Fresh Water	46594
Diode		Pump, Mounting Gasket	N/A
Dipstick	N/A	Pump, Rebuild Kit	N/A
Distributor	46493	Pump, Sea Water	42026
Distributor Cap	46592	Pump, Mounting Gasket	N/A
Distributor Igniter	46593	Pump, Impeller Kit	46622
Distributor Rotor	43050	Pump, Repair Kit	46623
Drip tray	N/A	Pump, Fuel Lift	39273
Exhaust Temperature Switch	32923	Rectifier	N/A
Filter, Lube Oil	36918	Remote Lube Oil Filter	32149
Filter, Fuel	N/A	Resistor, Ballast	N/A
Fuse 8 amp	33769	Spare Parts Kit A	46620
Fuse 30 amp	N/A	Spare Parts Kit B	46621
Gasdenser	38052	Spark plug	43071
Gasket, Head	46600	Starter Motor	34552
Gasket, Oil Pan	N/A	Starter Solenoid	36218
Gasket Set, Upper	46618	Switch, On	33632
Gasket Set, Complete	46619	Switch, Start/Stop	42521
Governor	46225	Tank, Coolant Recovery	24977
Heat Exchanger	46578	Thermostat	46097
Heat Exchanger End Cap	33297	Thermostat Mounting Gasket	33417
Heat Exchanger Gasket	33298	Valve Cover Gasket	46595
Hourmeter	42388	Voltage Regulator	46446
Ignition Coil	46492	Voltmeter	37605
Isolators, Front	21529	Water Injected Exhaust Elbow	46617
Isolators, Rear	21529	Water Temperature Meter	37601
Manual, Operator	46221	Water Temperature Sender	35109
Manual, Parts list		Water Temperature Switch	39550
Manual, Technical		Wire Set, Sparkplug	46596
Oil Pressure Switch	37323	Zinc	11885

## 15.0 BTG/A Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Battery Charger	N/A	Overspeed Shutdown	41196
Belt, Sea Water Pump	33681	Panel, Genset Control	37149
Belt, Std Alternator	30475	Panel, Remote Instrument	36055
Belt, Timing		Panel, Remote Start/Stop	33703
Belt Guard	36231	Pump, Fresh Water	34563
Capacitor		Pump, Mounting Gasket	33481
Carburetor	33751	Pump, Rebuild Kit	N/A
Carburetor Rebuild Kit	36450	Pump, Sea Water	24102
Circuit Breaker	24683	Pump, Mounting Gasket	N/A
Diode	35931	Pump, Impeller Kit	33112
Dipstick		Pump, Repair Kit	24652
Distributor	34106	Pump Seal	24649
Distributor Cap	34113	Pump, Fuel Lift	39273
Distributor Igniter	34164	Rectifier	30809
Distributor Rotor	34093	Remote Lube Oil Filter	32149
Exhaust Temperature Switch	32923	Resistor, Ballast	
Filter, Lube Oil	36918	Solenoid, Carburetor Choke	
Filter, Fuel	N/A	Spare Parts Kit A	33803
Gasdenser	38052	Spare Parts Kit B	34570
Gasket, Head		Spark plug	33805
Gasket, Oil Pan		Starter Motor	34552
Gasket Set, Upper	34568	Starter Solenoid	36218
Gasket Set, Complete	34569	Switch, On	33633
Governor	33560	Switch, Start	33632
Heat Exchanger	36902	Switch, Stop	33631
Heat Exchanger End Cap	22850	Tank, Coolant Recovery	24977
Heat Exchanger Gasket	22851	Thermostat	35736
Hourmeter	36192	Thermostat Mounting Gasket	33417
Ignition Coil	33806	Transformer	37463
Isolators, Front	21529	Valve Cover Gasket	33819
Isolators, Rear	21529	Voltage Regulator	34410
Manual, Operator	35909	Voltmeter	37605
Manual, Parts list	37315	Water Temperature Meter	37601
Manual, Technical	37375	Water Temperature Sender	35109
		Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow	37534
Oil Pressure Meter	37603	Wire Set	33817
Oil Pressure Sender	24132	Zinc	11885

## 20.0 BEG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Battery Charger	N/A	Overspeed Shutdown	41196
Belt, Sea Water Pump	35440	Panel, Genset Control	40628
Belt, Std Alternator	40555	Panel, Remote Instrument	36055
Belt, Timing	40825	Panel, Remote Start/Stop	33703
Belt Guard	40552	Pump, Fresh Water	40850
Capacitor	N/A	Pump, Mounting Gasket	40851
Carburetor	33751	Pump, Rebuild Kit	N/A
Carburetor Rebuild Kit	36450	Pump, Sea Water	38445
Circuit Breaker	24683	Pump, Mounting Gasket	40851
Diode	39666	Pump, Impeller Kit	11907
Dipstick	40781	Pump, Repair Kit	33329
Distributor	40857	Pump Seal	14774
Distributor Cap	40859	Pump, Fuel Lift	39273
Distributor Igniter	40864	Rectifier	N/A
Distributor Rotor	40860	Remote Lube Oil Filter	32149
Exhaust Temperature Switch	32923	Resistor, Ballast	40854
Filter, Lube Oil	36918	Solenoid, Carburetor Choke	N/A
Filter, Fuel	40838	Spare Parts Kit A	40751
Gasdenser	38052	Spare Parts Kit B	40752
Gasket, Head	40772	Spark plug	40855
Gasket, Oil Pan	N/A	Starter Motor	38384
Gasket Set, Upper	40753	Starter Solenoid	39523
Gasket Set, Complete	40754	Switch, On	33633
Governor	33560	Switch, Start	33632
Heat Exchanger	38300	Switch, Stop	33631
Heat Exchanger End Cap	22850	Tank, Coolant Recovery	24977
Heat Exchanger Gasket	22851	Thermostat	35736
Hourmeter	36192	Thermostat Mounting Gasket	40434
Ignition Coil	40853	Transformer	
Isolators, Front	15238	Valve Cover Gasket	40771
Isolators, Rear	301136	Voltage Regulator	42336
Manual, Operator	41302	Voltmeter	37605
Manual, Parts list	48000	Water Temperature Meter	37601
Manual, Technical		Water Temperature Sender	35109
		Water Temperature Switch	39550
Oil Pressure Switch	37323	Water Injected Exhaust Elbow	38760
Oil Pressure Meter	37603	Wire Set	40756
Oil Pressure Sender	24132	Zinc	11885

## 25.0 BEG Gasoline Generator Fast Moving Parts List

<b>Description</b>	<b>Part #</b>	<b>Description</b>	<b>Part #</b>
Battery Charger	43096	Overspeed Shutdown	41196
Belt, Sea Water Pump	35440	Panel, Genset Control	40628
Belt, Std Alternator	40555	Panel, Remote Instrument	36055
Belt, Timing	40825	Panel, Remote Start/Stop	33703
Belt Guard	40552	Pump, Fresh Water	40850
Cap, Pressure	24306	Pump, Mounting Gasket	40851
Capacitor	N/A	Pump, Rebuild Kit	N/A
Carburetor	33751	Pump, Sea Water	38445
Carburetor Rebuild Kit	36450	Pump, Mounting Gasket	N/A
Circuit Breaker	24683	Pump, Impeller Kit	11907
Diode	39666	Pump, Repair Kit	33329
Dipstick	40781	Pump Seal	14774
Distributor	40857	Pump, Fuel Lift	39273
Distributor Cap	40859	Rectifier	N/A
Distributor Igniter	40864	Remote Lube Oil Filter	32149
Distributor Rotor	40860	Resistor, Ballast	40854
Drip tray	38698	Solenoid, Carburetor Choke	N/A
Exhaust Temperature Switch	32923	Spare Parts Kit A	40751
Filter, Lube Oil	36918	Spare Parts Kit B	40752
Filter, Fuel	40838	Spark plug	40855
Gasdenser	38052	Starter Motor	38384
Gasket, Fresh Water Pump	40435	Starter Solenoid	39523
Gasket, Head	40772	Switch, On	33633
Gasket, Oil Pan	N/A	Switch, Start	33632
Gasket Set, Upper	40753	Switch, Stop	33631
Gasket Set, Complete	40754	Tank, Coolant Recovery	24977
Governor	33560	Thermostat	35736
Heat Exchanger	38300	Thermostat Mounting Gasket	40434
Heat Exchanger End Cap	22850	Transformer	N/A
Heat Exchanger Gasket	22851	Valve Cover Gasket	40771
Hourmeter	36192	Voltage Regulator	42336
Ignition Coil	40853	Voltmeter	37605
Isolators, Front	15238	Water Temperature Meter	37601
Isolators, Rear	301136	Water Temperature Sender	35109
Manual, Operator	41302	Water Temperature Switch	39550
Manual, Parts list	48000	Water Injected Exhaust Elbow	38760
Oil Pressure Switch	37323	Wire Set	40756
Oil Pressure Meter	37603	Zinc	11885
Oil Pressure Sender	24132		